

How do I display the J2K100 transmission oil pressure on Maretron's DSM150, DSM200, or DSM250 display?

Article Number: 236 | Rating: Unrated | Last Updated: Thu, Jan 14, 2010 12:34 PM

You display the J2K100 transmission oil pressure on a DSM150, DSM200, or DSM250 in the following way. Enter menu mode, scroll to "Favorite Screen Setup..." and press enter. Scroll to the favorite screen where you would like to view the oil pressure and press enter. Scroll to "Data:" and press enter. Scroll to "Transmission #x" where x is the engine instance you want to view (instance 0 is single or port transmission and instance 1 is the starboard transmission) and press enter. Scroll to "Oil Pressure" and press enter. Press the back key three times to exit menu mode and return to the normal viewing mode. Scroll through your screens to the favorite screen you selected for oil pressure.

Posted - Thu, Jan 14, 2010 12:34 PM. This article has been viewed 3435 times.

Online URL: <https://www.maretron.com/support/knowledgebase/phpkbv7/article.php?id=236>