

What is the RAA100 configuration setting "Gauge Resistance, + to sender" and "Gauge Resistance, - to sender"?

Article Number: 276 | Rating: Unrated | Last Updated: Fri, Jul 17, 2015 4:39 AM

If the RAA100's operating mode is set to "NMEA 2000 & Analog Gauge", then it is important to configure the RAA100 with the gauge's resistances in order for the RAA100 to operate correctly. Please refer to the RAA100 User's Manual for a detailed description of measuring the gauge's resistance values.

Posted - Thu, Jul 10, 2008 1:48 PM. This article has been viewed 2241 times.

Online URL: <https://www.maretron.com/support/knowledgebase/phpkbv7/article.php?id=276>