

With regards to the DCM100, where should I connect the ring terminal of temperature sensor (part number TR3K)?

Article Number: 312 | Rating: Unrated | Last Updated: Mon, Jun 2, 2014 8:51 PM

You should connect the ring terminal on the Temperature Sensor to the negative terminal of the DC source being monitored.

Posted - Mon, Jun 29, 2009 7:24 PM. This article has been viewed 2411 times.

Online URL: <https://www.maretron.com/support/knowledgebase/phpkbv7/article.php?id=312>