

**I see that Maretron's DSM150, DSM200 and DSM250 displays have TLA100 configuration settings called "Gauge Resistance, + to sender:" and "Gauge Resistance, - to sender: "; what are these?**

Article Number: 62 | Rating: Unrated | Last Updated: Sun, Jul 12, 2015 11:20 PM

If the TLA100's operating mode is set to "NMEA 2000 & Analog Gauge", then it is important to configure the TLA100 with the gauge's resistances in order for the TLA100 to operate correctly. Please refer to the TLA100 Users Manual for a detailed description of measuring the gauge's resistance values.

Posted - Mon, Jun 25, 2012 12:19 PM. This article has been viewed 3499 times.

Online URL: <https://www.maretron.com/support/knowledgebase/phpkbv7/article.php?id=62>