

## What is "Bus Errors"?

Article Number: 690 | Rating: Unrated | Last Updated: Fri, May 25, 2018 9:13 PM

The N2KMeter tracks network data transmission errors in real-time, and lets you know if the error rate is acceptable 😊 , marginal 😐 , or unacceptable 😞 . Any error rate greater than zero is undesirable (although your network may still function since CAN automatically retransmits after errors). An error rate greater than 10/s indicates a problem that should be investigated. The N2KMeter uses unique technology to accurately determine which node was attempting to transmit when a bus error occurs.

Note: Node error measurements only include errors known to have occurred when the node is transmitting. Frames with corrupt ID fields, and frames that cannot be attributed to specific nodes are not included in node measurements. It is common for the sum of per-node results to be less than the overall network values.

### The CAN Error Frame

The **error frame** is a special message that violates the formatting rules of a **CAN** message. It is transmitted when a node detects an **error** in a message, and causes all other nodes in the network to send an **error frame** as well. The original transmitter then automatically retransmits the message. - [www.ti.com](http://www.ti.com)

Posted - Thu, May 24, 2018 6:57 PM. This article has been viewed 350 times.

Online URL: <https://www.maretron.com/support/knowledgebase/phpkbv7/article.php?id=690>