

## **I navigate using magnetic heading and not true heading; how do I use the SSC200 compass and N2KView software to view my heading in magnetic?**

Article Number: 89 | Rating: Unrated | Last Updated: Sun, Jul 12, 2015 11:57 PM

The SSC200 compass outputs heading information in magnetic format, so you need to properly configure N2KView to display heading in magnetic. To view magnetic heading within N2KView, click on the "Units Setup" tab, and select "Magnetic" from the "Heading/Course/Bearing" setting.

Posted - Thu, Jun 19, 2008 11:38 AM. This article has been viewed 3105 times.

Online URL: <https://www.maretron.com/support/knowledgebase/phpkbv7/article.php?id=89>