

How do I display the WSO100 apparent wind on Maretron's DSM150, DSM200, or DSM250 display?

You display the WSO100 apparent wind on a DSM150, DSM200, or DSM250 in the following way.

1. Enter menu mode, scroll to "Favorite Screen Setup..." and press
2. Scroll to the favorite screen where you would like to view the apparent wind and press
3. Scroll to "Data:" and press
4. Scroll to "Wind" and press
5. Scroll to either "Dir. Apparent" or "Speed Apparent" and press
6. Press the key three times to exit menu mode and return to the normal viewing mode
7. Scroll through your screens to the favorite screen you selected for apparent wind.

Online URL:

<https://www.maretron.com/wp-content/phpkbv96/article.php?id=21>