

## How do I display the J2K100 engine oil pressure on Maretron's DSM150, DSM200, or DSM250 display?

You display the J2K100 engine oil pressure on a DSM150, DSM200, or DSM250 in the following way. Enter menu mode, scroll to "Favorite Screen Setup..." and press enter. Scroll to the favorite screen where you would like to view the oil pressure and press enter. Scroll to "Data:" and press enter. Scroll to "Engine #x" where x is the engine instance you want to view (instance 0 is single or port engine and instance 1 is the starboard engine) and press enter. Scroll to "Oil Pressure" and press enter. Press the back key three times to exit menu mode and return to the normal viewing mode. Scroll through your screens to the favorite screen you selected for oil pressure.

Online URL:

<https://www.maretron.com/wp-content/phpkbv96/article.php?id=226>