

What is the RAA100 configuration setting "operating mode"?

The RAA100 can operate in one of two ways:

- without an analog gauge, which is referred to as the "NMEA 2000" mode, and
- with an analog gauge, which is referred to as the "NMEA 2000 & Analog Gauge" mode

The default mode of operation is without an analog gauge or the "NMEA 2000" mode. You can change the RAA100 operating mode using Maretron's DSM150, DSM200, or DSM250 display.

Online URL:

<https://www.maretron.com/wp-content/phpkbv96/article.php?id=274>