

## What is the RAA100 configuration setting "Gauge Resistance, + to sender" and "Gauge Resistance, - to sender"?

If the RAA100's operating mode is set to "NMEA 2000 & Analog Gauge", then it is important to configure the RAA100 with the gauge's resistances in order for the RAA100 to operate correctly. Please refer to the RAA100 User's Manual for a detailed description of measuring the gauge's resistance values.

Online URL:

<https://www.maretron.com/wp-content/phpkbv96/article.php?id=276>