

How do I set the RAA100 configuration setting called "Gauge Resistance, + to sender" using Maretron's DSM150, DSM200, or DSM250 display?

You set the RAA100 "Gauge Resistance, + to sender" using Maretron's DSM150, DSM200, or DSM250 display in the following way. Enter menu mode, scroll to "Configuration..." and press enter. Scroll to "Device Configuration..." and press enter. Scroll to the row containing the RAA100 and press enter. Scroll to "Gauge Resistance, + to sender"::" and press enter. Scroll until you find the appropriate resistance and press enter.

Online URL:

<https://www.maretron.com/wp-content/phpkbv96/article.php?id=277>