

With regards to the DCM100, where should I connect the ring terminal of temperature sensor (part number TR3K)?

You should connect the ring terminal on the Temperature Sensor to the negative terminal of the DC source being monitored.

Online URL:

<https://www.maretron.com/wp-content/phpkbv96/article.php?id=312>