

How do I set the TLA100 configuration setting called "Gauge Resistance, + to sender:" using Maretron's DSM150, DSM200, or DSM250 display?

You set the TLA100 "Gauge Resistance, + to sender" using Maretron's DSM150, DSM200, or DSM250 display in the following way:

1. Enter menu mode, scroll to "Configuration:" and press
2. Scroll to "Device Configuration:" and press
3. Scroll to the row containing the TLA100 and press
4. Scroll to "Gauge Resistance, + to sender:" and press
5. Scroll until you find the appropriate resistance and press

Online URL:

<https://www.maretron.com/wp-content/phpkbv96/article.php?id=63>