

N2KExtractor™

Maretron Data Extraction Software User's Manual

Revision 4.0.8

Copyright © 2026 Maretron, now part of Teledyne – All rights reserved

**Maretron
120 Intracoastal Pointe Drive
Jupiter, FL 33477 USA
Toll Free: +1 (866) 550-9100
Phone: +1 (603) 324-7900
support@maretron.com
<http://www.maretron.com>**

Maretron Manual Part #: M003026

Revision History

Revision	Description
1.0	Original document
4.0.8	Updated document format Updated company profile and contact details Updated Software Revision reference Updated minimum system requirements Updated URLs for website and downloads Removed separate Adobe AIR installation steps Updated multiple screen shots of installation and application navigation images Added sections for uninstalling N2KExtractor and Ext2Fsd applications Expanded list of TCS supported equipment Miscellaneous verbiage updates

Table of Contents

1	Introduction.....	1
2	Software Revision.....	1
3	Software Features	1
4	System Requirements	1
5	Installing N2KExtractor	1
5.1	Installing Ext2 Device Drivers	5
5.2	Uninstall N2KExtractor™	9
5.3	Uninstall Ext2 Device Drivers.....	10
6	Updating N2KExtractor™	11
7	Starting N2KExtractor™	13
7.1	Finding Sources of Data	13
7.2	USB Drive or Disk Database.....	13
7.2.1	Microsoft Windows Format Message	14
7.2.2	Ext2 Device Drivers.....	14
7.3	Open a connection to a VDR100 based on the serial number of the VDR100.....	15
7.4	Open a connection to a VDR100 based on the saved vessel table	16
7.5	Open a connection to vessel data stored on the Telemetric Cloud Service	17
8	Screen Layout	19
8.1	Timeline Area.....	20
8.1.1	Timeline Bars	20
8.1.2	Timeline Data Entry Fields	21
8.1.3	Timeline Buttons	21
8.2	Control Area.....	21
8.2.1	Control Area Buttons.....	22
8.3	Parameter Area	22
8.3.1	Parameter Table	23
8.3.2	Parameter Manipulation	24
8.3.3	Select Parameter Tree	25
8.3.4	Parameter Editor	26
8.4	Map Area	27
8.5	Graph Area	28
8.6	Exporting to a .csv File.....	29
8.7	Long Running Operations	31
9	Menus.....	31
9.1	File Menu	31
9.2	Setup Menu	32
9.3	Help Menu	32
10	Vessel Connections Dialog.....	33
10.1	Vessel Table	33
10.2	Vessel Table Buttons	33
11	Connections Settings Dialog.....	34
12	Units Setup	36
13	Technical Support.....	37

This page is intentionally left blank

1 Introduction

N2KExtractor™ software is a powerful and free PC-based tool for extracting data from USB Flash Drives created by Maretron's Vessel Data Recorder (VDR100) or from the Maretron Telemetric Cloud Service. Data can be extracted into a Comma Separated Values (.csv) file or can be graphed and the route plotted on a map directly inside the N2KExtractor™ program. The PC running N2KExtractor™ software can access the data stored on the VDR100 USB flash drive by connecting the PC together with the VDR100 over a LAN or WAN using Ethernet, or for faster operation the USB Flash drive can be removed from the VDR100 and plugged directly into a USB port on the PC.

2 Software Revision

This manual corresponds to N2KExtractor software version **4.0.8**.

3 Software Features

The latest revision of N2KExtractor offers the following features.

- User selectable parameters
- User selectable units for each parameter
- User selects time over which parameters are extracted.
 - Timeline shows user selected period
- Data can be quickly displayed within the program
 - Google maps show route
 - Up to 4 parameters map be displayed on a graph
- Data can be extracted to a .csv file for detailed analysis in a spreadsheet.
 - User selectable sample interval for extraction to .csv file.

4 System Requirements

The following are required computer specifications for running N2KExtractor.

- PC running Windows® 7 or newer
- 2GB RAM
- 800 MB Hard Disk Space
- Internet connection (May be required during installation process for updating system libraries)
 - Optional for Upgrades and Viewing Routes on maps

5 Installing N2KExtractor


N2KExtractor™ may be obtained free of charge from the Maretron website.

<https://www.maretron.com/products/n2kextractor/>


Running the installer program will take you through the following steps. Please note that N2KExtractor™ requires additional software to be installed on your PC if you intend to extract data locally using the USB media of the Maretron Vessel Data Recorder (VDR100).




Defines the name of the program to be installed, press **Next** to proceed.

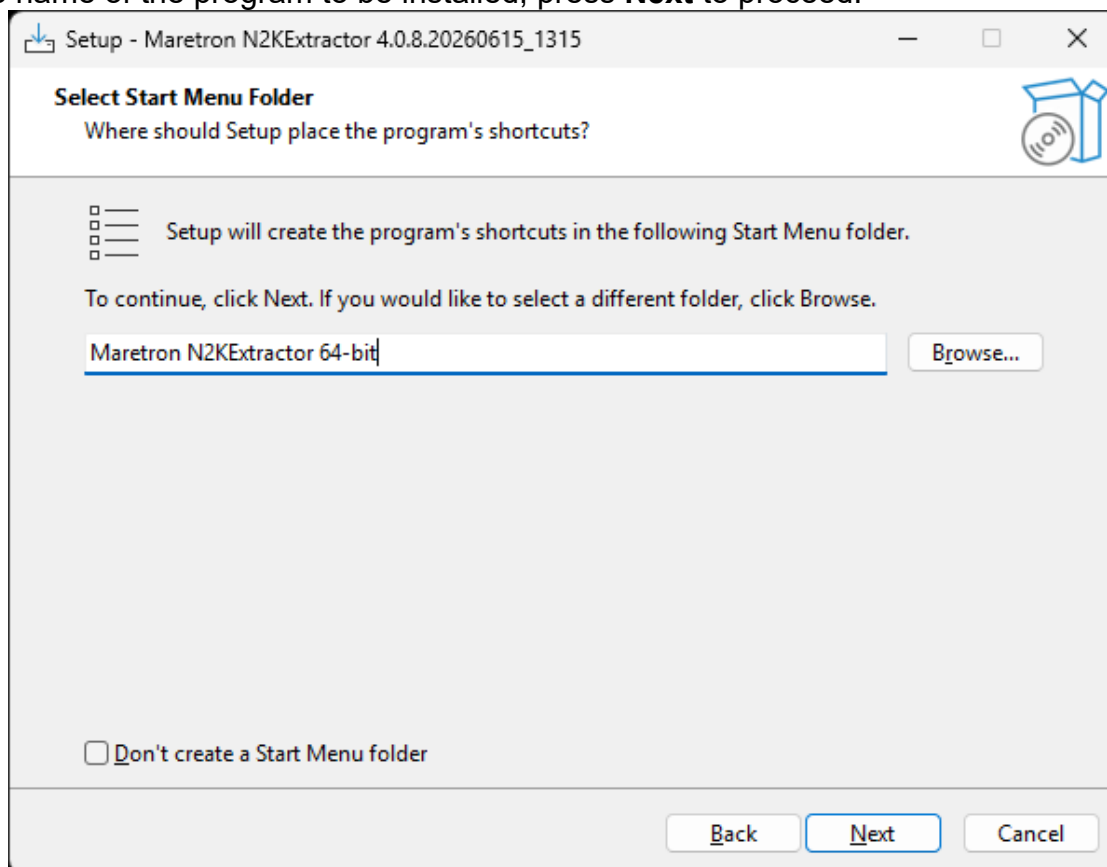


Defines the path of the installation files for N2KExtractor installation, press **Next** to proceed.

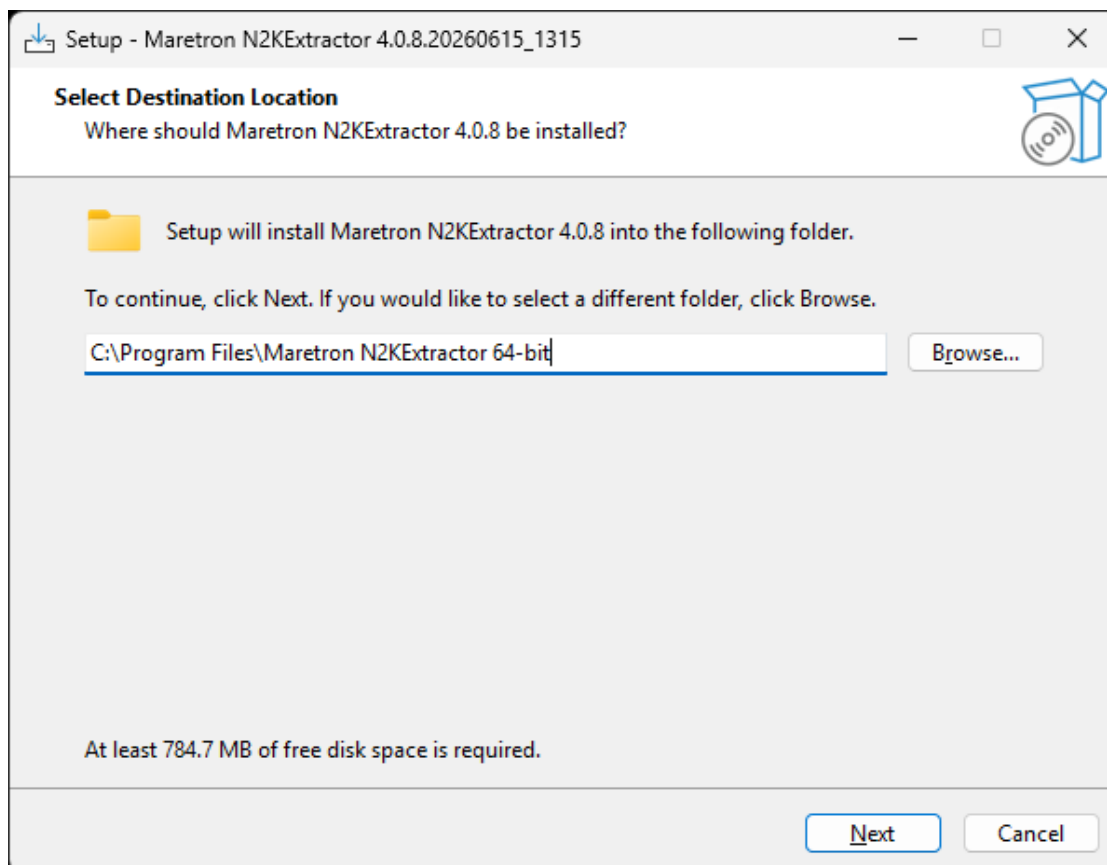


The user can elect to create a Desktop and/or Quick Launch shortcuts, press **Next** to proceed.

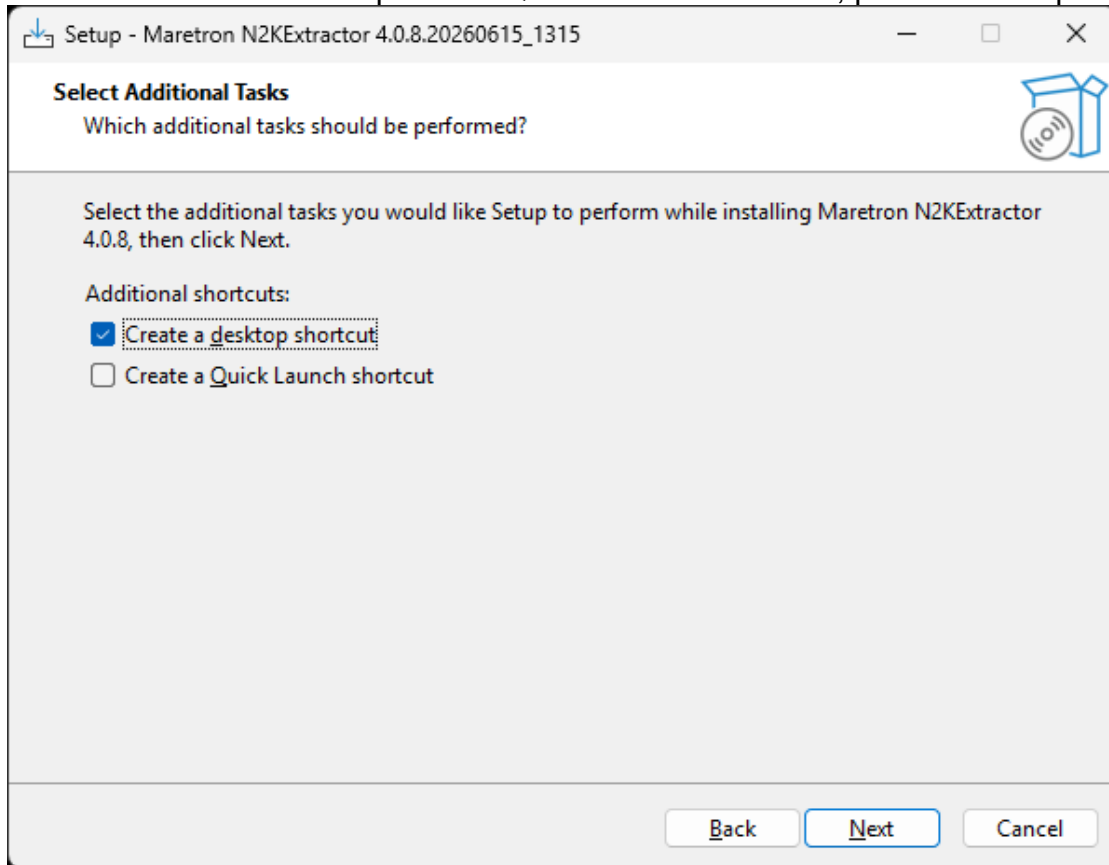


Confirming the installation details, select **Install** to start the installation process.

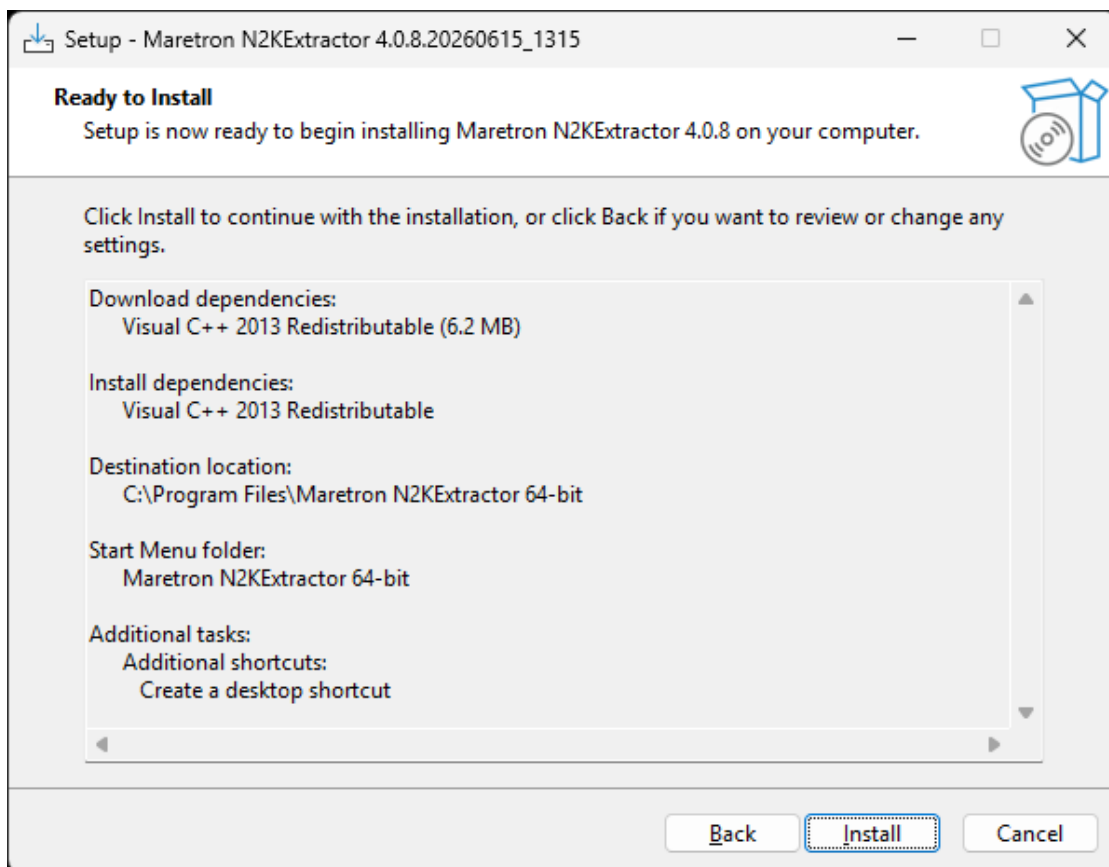

The installation process should take less than 1 minute to complete.

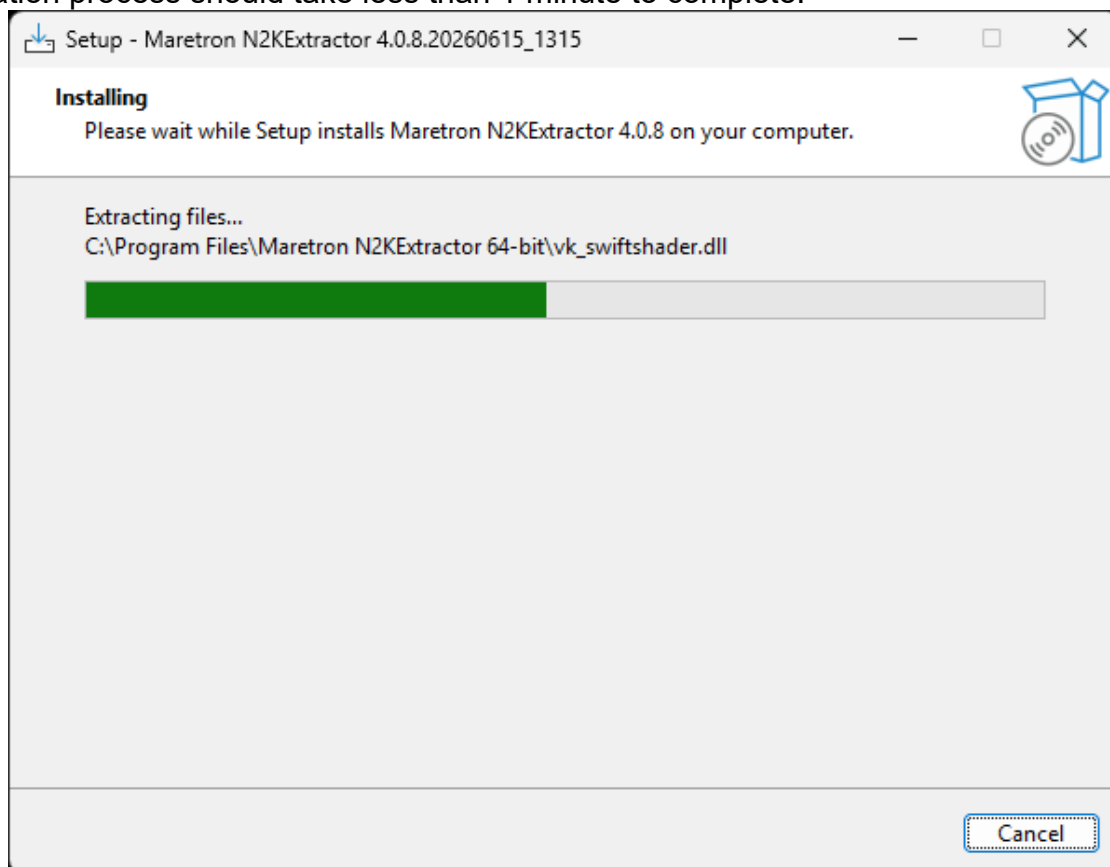

Once the installation is complete, select Finish to complete the installation and launch the application.

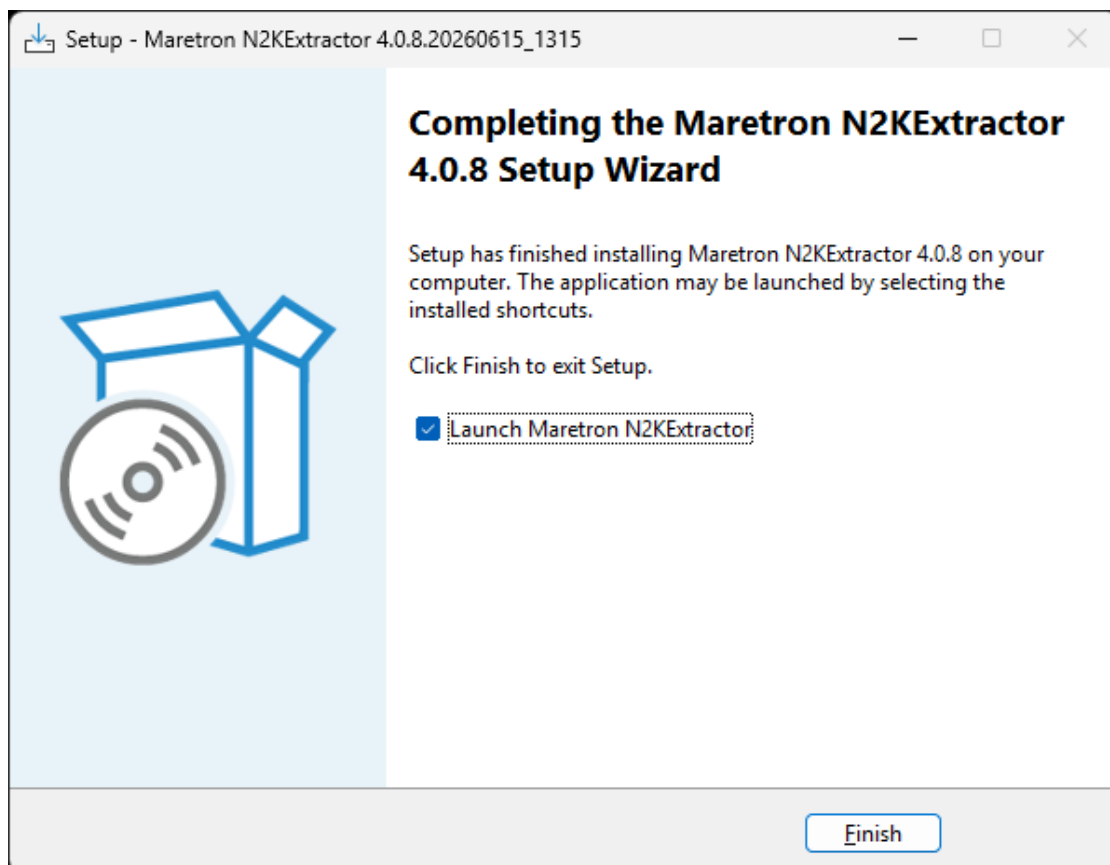

5.1 Installing Ext2 Device Drivers

The file system on the USB Flash Drive is different from the FAT file system supported by Windows. A special driver is required to access the USB Flash Drive, EXT3 & EXT4 journal, which is a more traditional format to Linux based systems.

*Please be advised, this utility will require elevated user privileges to complete the installation.

The N2KExtractor™ installation program will check if these drivers have been installed, and if not, will provide a notice to the user if the service is not installed or running.


This Ext2Fsd installer is provided within the installation files of N2KExtractor in the following location:
C:\Program Files\Maretron N2KExtractor 64-bit\Ext2Fsd-x.xx.exe

The Ext2Fsd installer may also be downloaded directly from the Maretron website:


www.maretron.com/files/N2KExtractor/Ext2Fsd.exe

Please use the following screens to navigate through the installation process.


Select **Next** to start the installation.

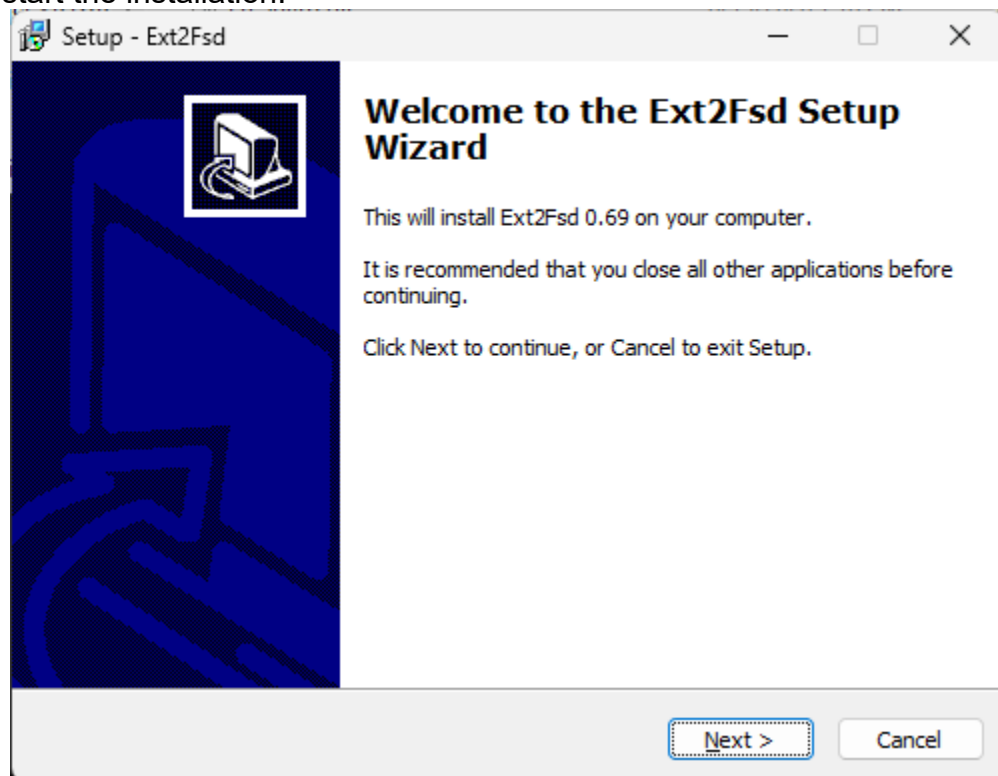


Defines the path of the installation files for Ext2Fsd installation, press **Next** to proceed.

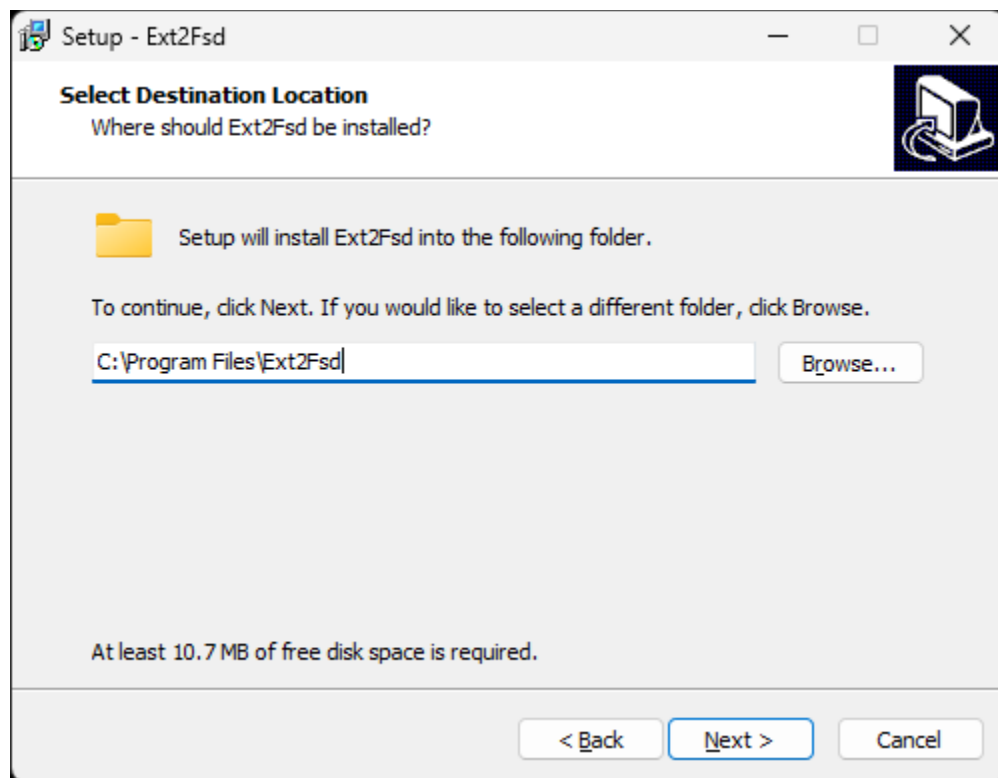


Confirm component installation by pressing **Next**.

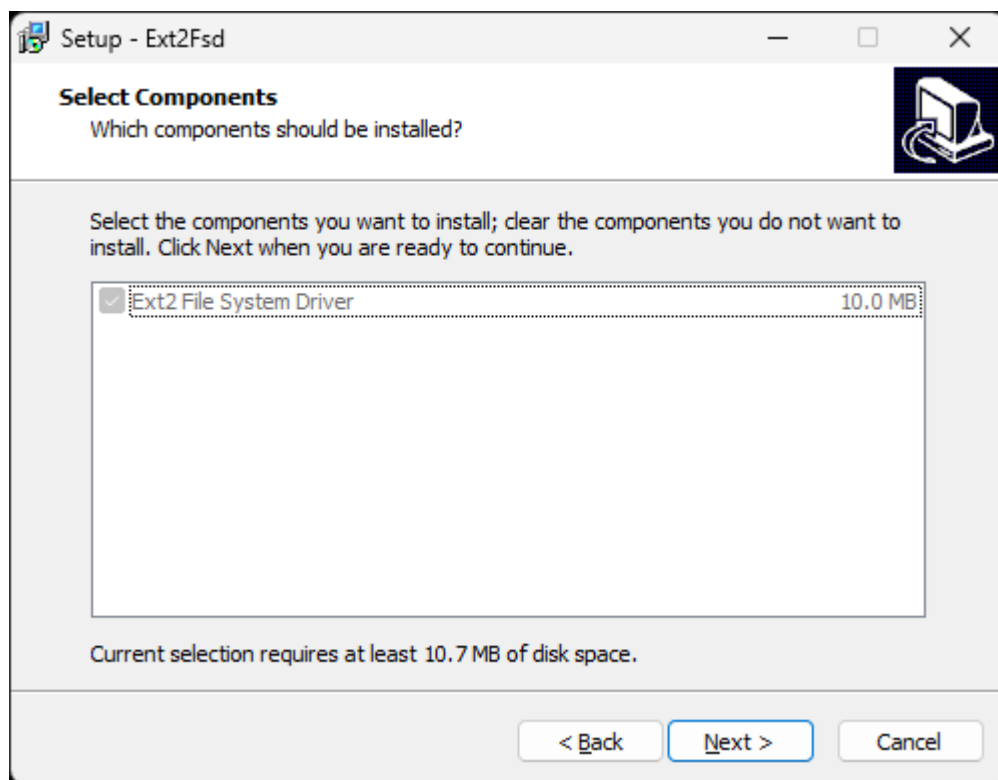


Defines the name of the program to be installed, press **Next** to proceed.

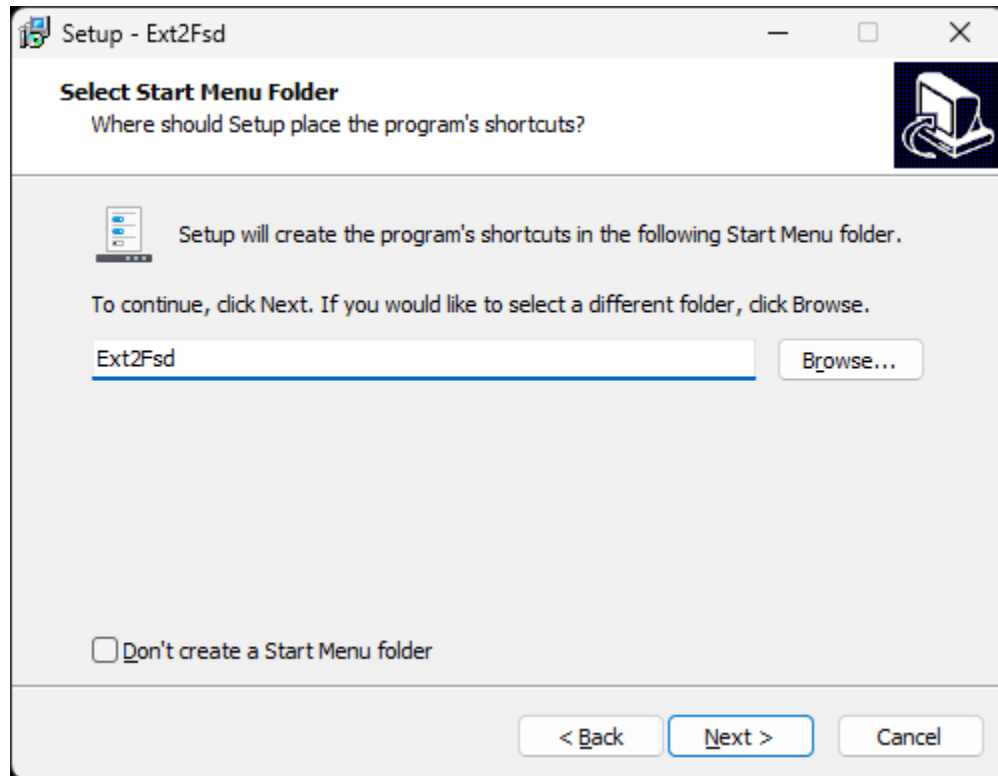


Please enable all of the following features, if not checked by default.
Press **Next** to start the installation.

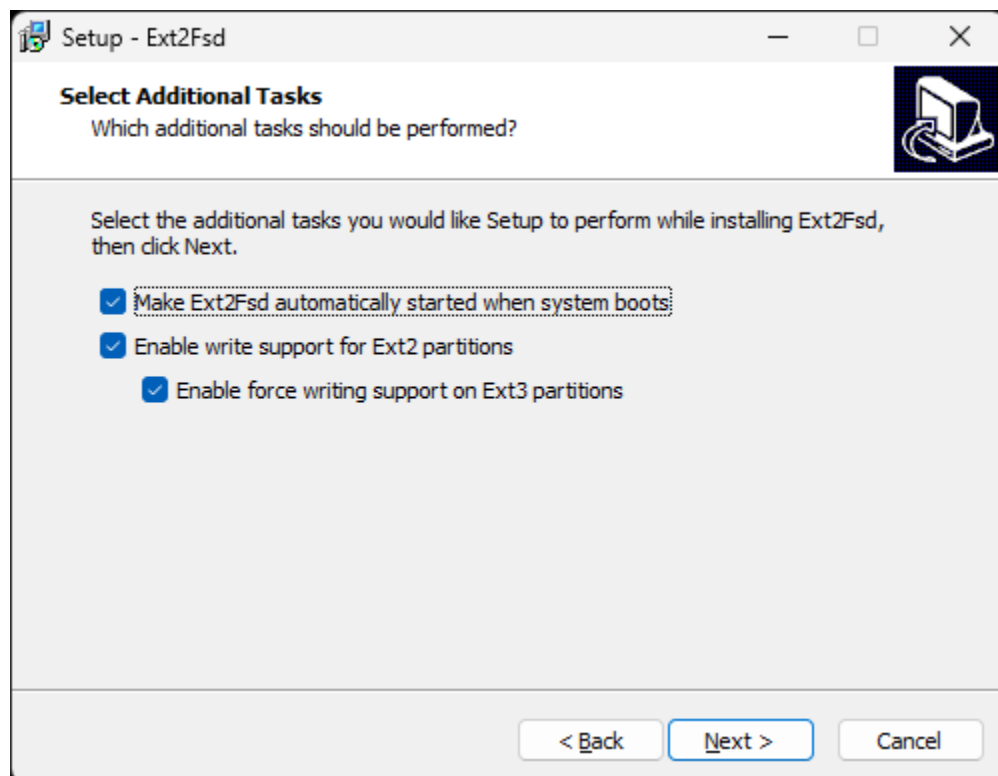


The installation process should take less than 1 minute to complete.

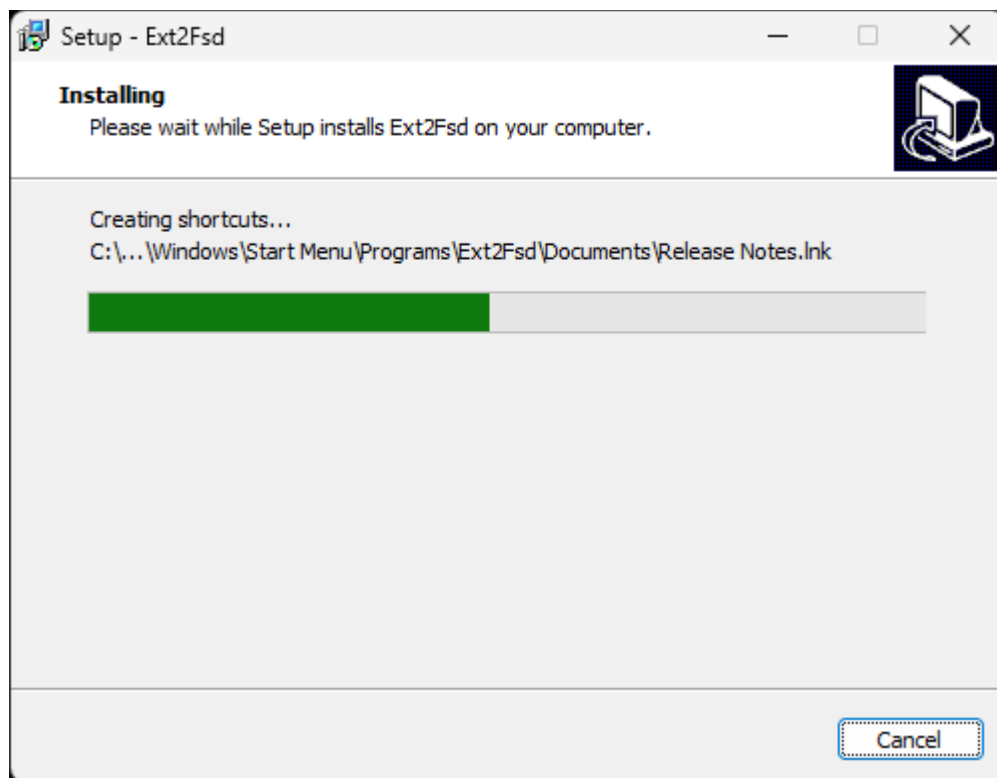

Elect to start the Ext2 Manager, if not enabled by default, press **Finish** to complete the installation.

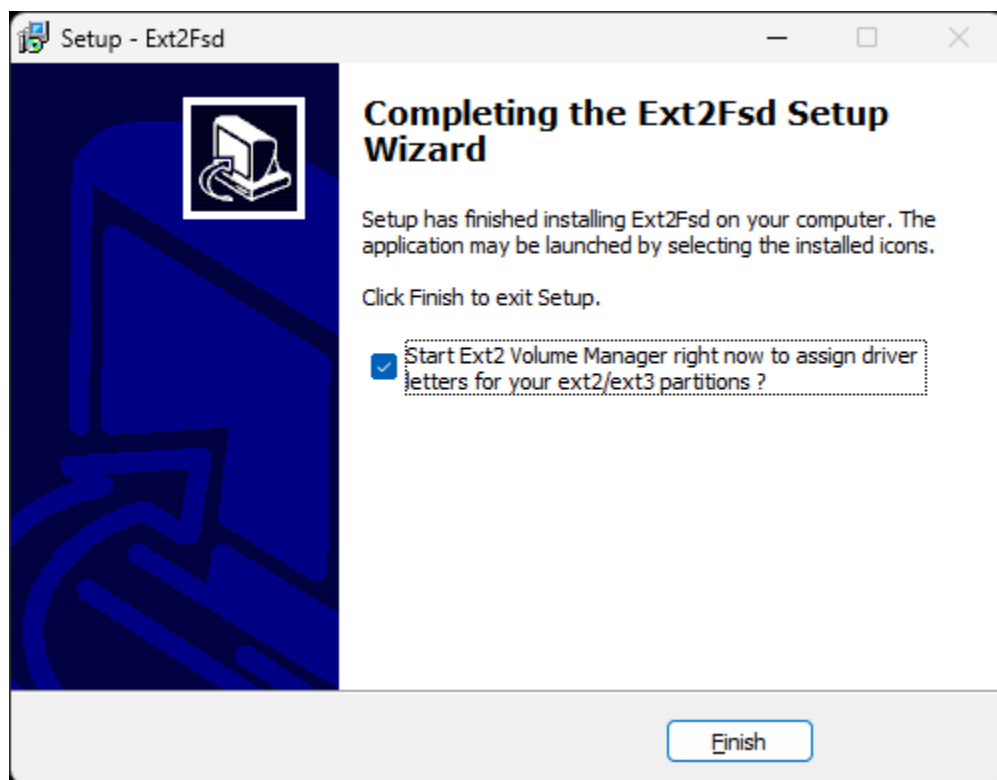

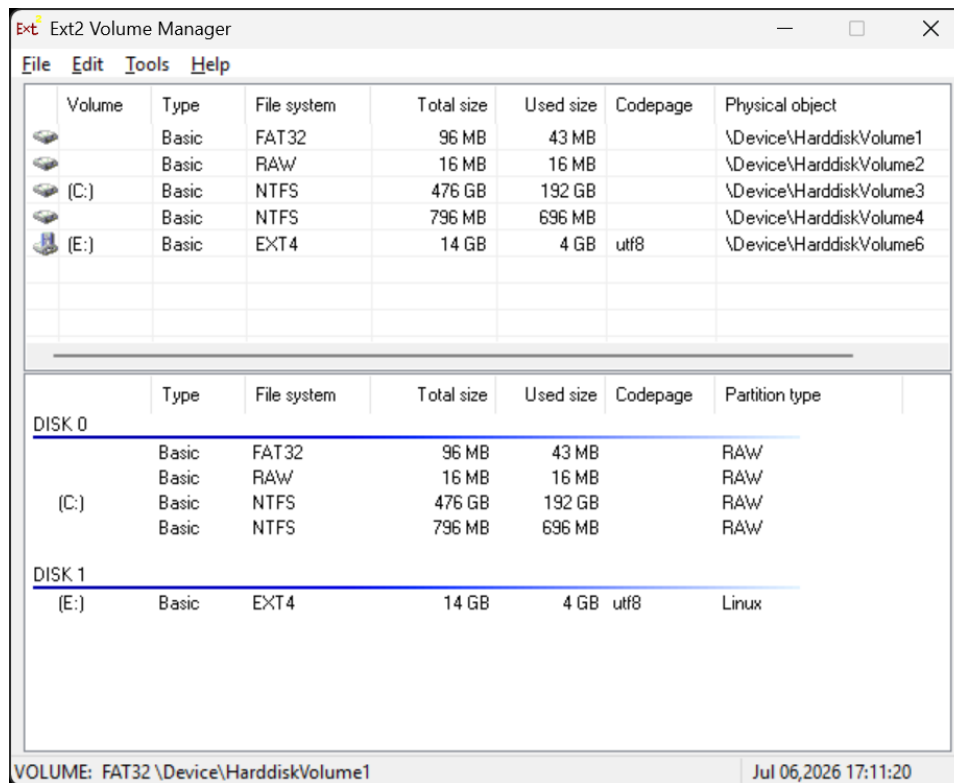

The above dialog is a monitor that shows the storage volumes on your computer. The monitor is not required to be running for the Disk Driver to function, so you can close it by clicking of the red X at the top right after confirming that the drivers have been installed correctly.

To confirm that the Ext2 File System drivers have been installed correctly:


- Insert the USB Flash Drive created by the VDR100.
- In the Ext2 Volume Manager you should be able to see the EXT4 file system.
 - o (E: in the screenshot above).
- Using the Windows file system Browser (Windows Start → Computer), check that you can see the drive and that its contents are visible.
 - o If the drive and its contents are not visible, a restart of your computer may be required.

5.2 Uninstall N2KExtractor™


The uninstall process will vary slightly across the different generations of Windows Operating Systems but will follow a similar process.

Navigate to Settings → Apps or Add/Remove Programs → Apps Installed → Select Application


Select **Yes** to proceed with the uninstall process.

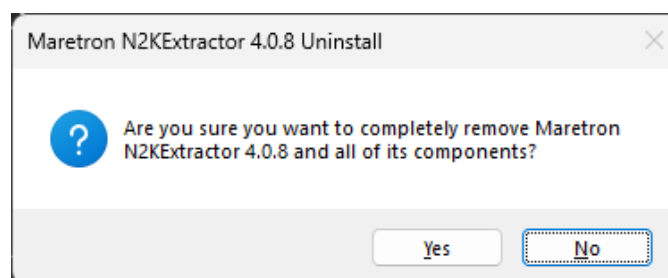

The uninstallation process should take less than 1 minute to complete.

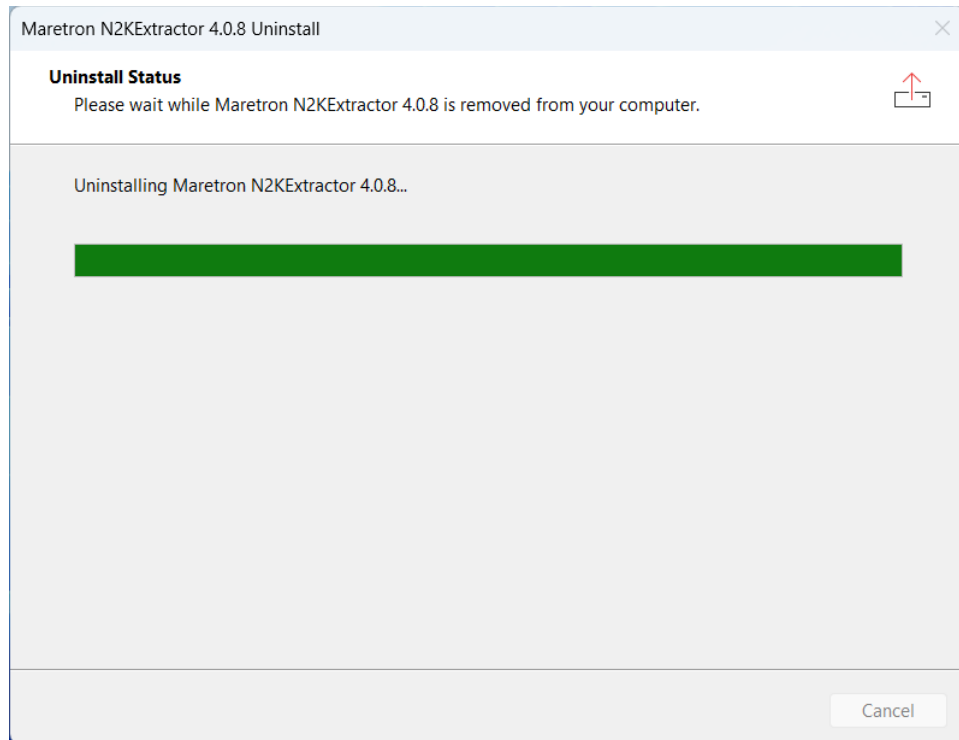

Confirms the application has been removed from your system, press **OK** to close the window.

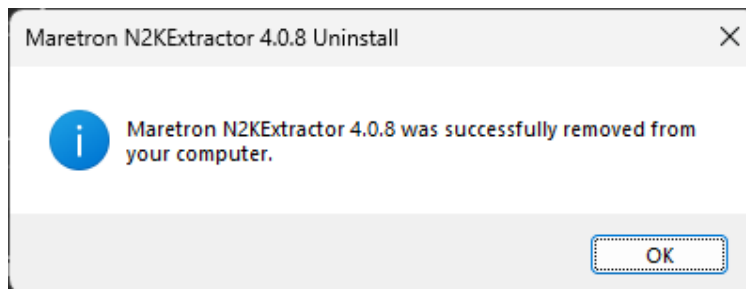


5.3 Uninstall Ext2 Device Drivers


The uninstall process will vary slightly across the different generations of Windows Operating Systems but will follow a similar process.

Navigate to Settings → Apps or Add/Remove Programs → Apps Installed → Select Application


Select **Yes** to proceed with the uninstall process.

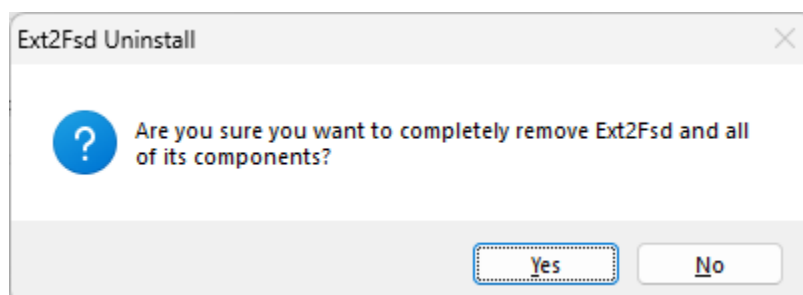

The installation process should take less than 1 minute to complete

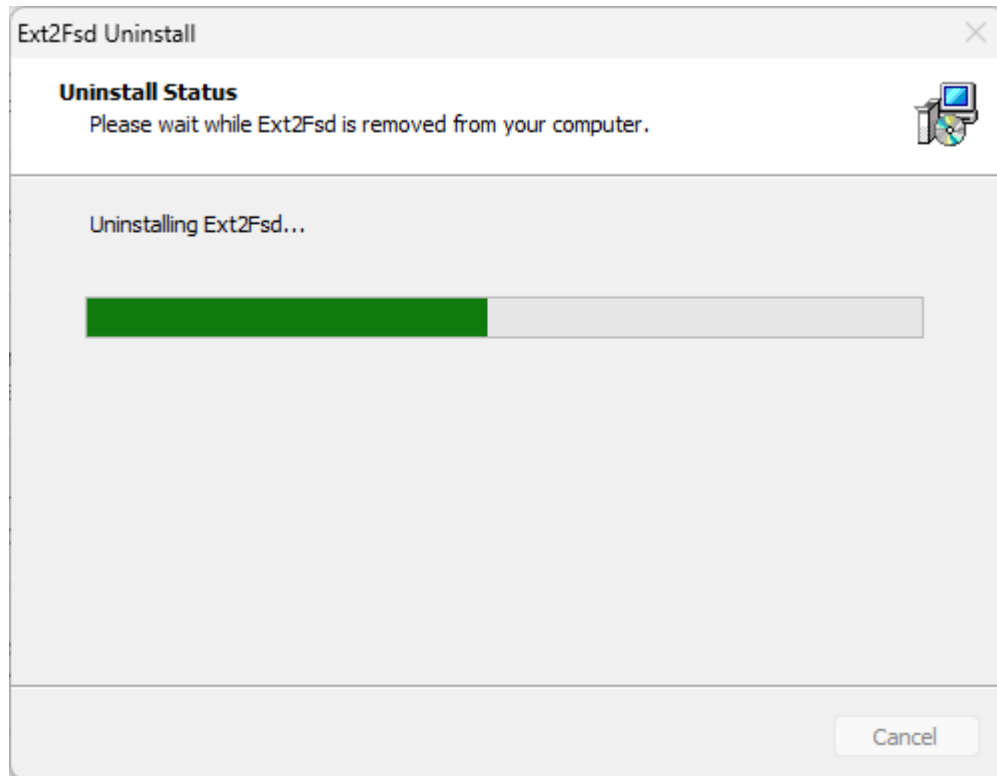


You will need to fully restart the computer in order to finalize the uninstallation process.

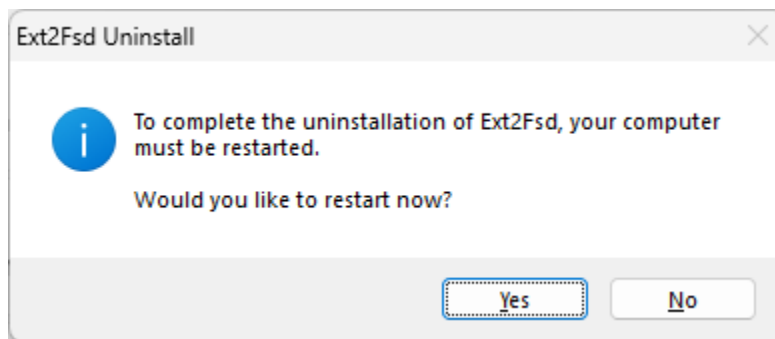


6 Updating N2KExtractor™


The N2KExtractor™ program is constantly improved and updated. If you want the latest update, be sure to start the N2KExtractor™ program while the PC is connected to the Internet and verify that the entry **Download Software Updates on Startup** is checked under the **Setup** drop down menu.

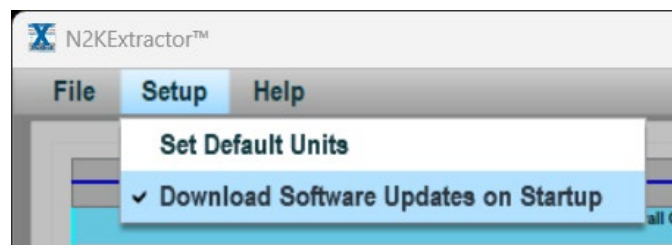


When N2KExtractor™ starts up, (and only when the program starts up) the program automatically checks Maretron's website for the latest version. If a later version is found on the website, then the following Popup Window will be displayed.

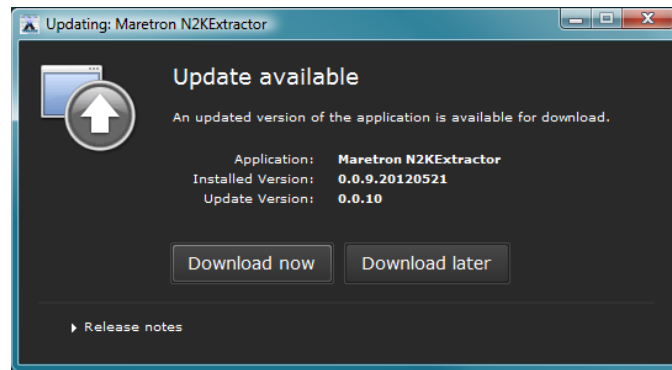

Click on Download Now, and a new version will be downloaded from the Maretron® Website.

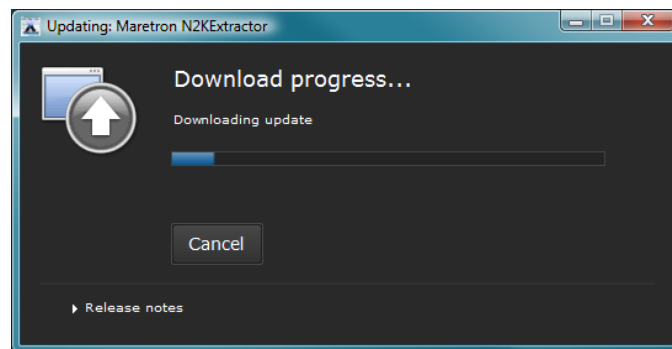

While the update is being downloaded, you can view the Release Notes which give some information about the changes from the previous release (click "Release Notes" at the bottom of the screen).

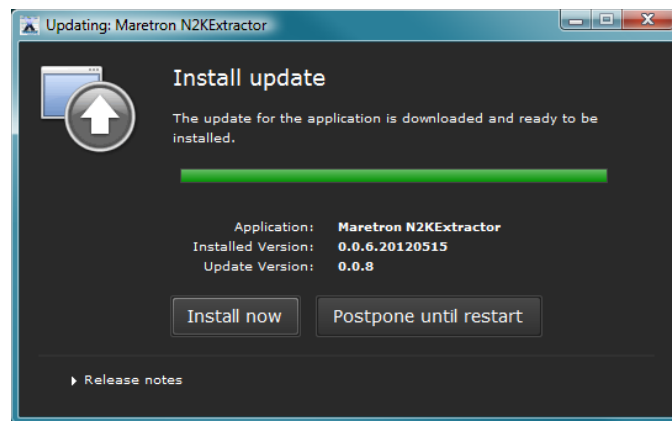

When the download is complete, this Popup Window will be displayed. Click on the **Install Now** button to install the new version.

The previous version of N2KExtractor™ will be automatically closed, and the new version started with the same file open.

7 Starting N2KExtractor™

When unpacking the box containing the Maretron RIM100, you should find the following items:

You may start N2KExtractor™ in one of three ways:

Selecting the *All Programs*→*N2KExtractor™* item from the Start Menu

Clicking the quick launch icon, if you requested one to be created during installation

Clicking the desktop icon, if you requested one to be created during installation


7.1 Finding Sources of Data

There are multiple sources of data for N2KExtractor.


- A USB Drive taken from a VDR100.
- A directory structure on disk made by copying the contents of a USB Drive taken from a VDR100.
- A direct connection to a VDR100 over Ethernet
- The Maretron Telemetric Cloud Service. This uses data stored in the Cloud Server that was uploaded from a MBB200C, MBB300C, TSM800C, TSM810C, TSM1330C or WSV100.
- The Demo database is supplied with N2KExtractor.

7.2 USB Drive or Disk Database

To open a database on a USB Flash Drive or Hard Disk, click on the **File** menu, then **Open VDR100 Database**, then **Flash Drive/Hard Drive**.

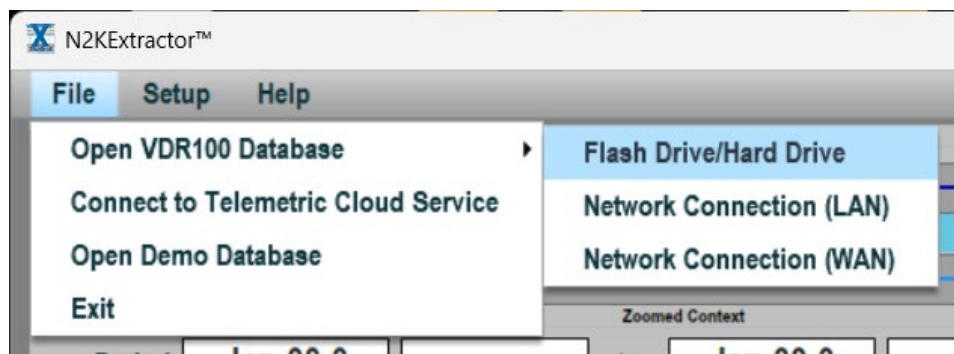


This will open a file browse dialog, where you can select the root of the database structure, either the root of the USB drive or a directory on the hard drive.

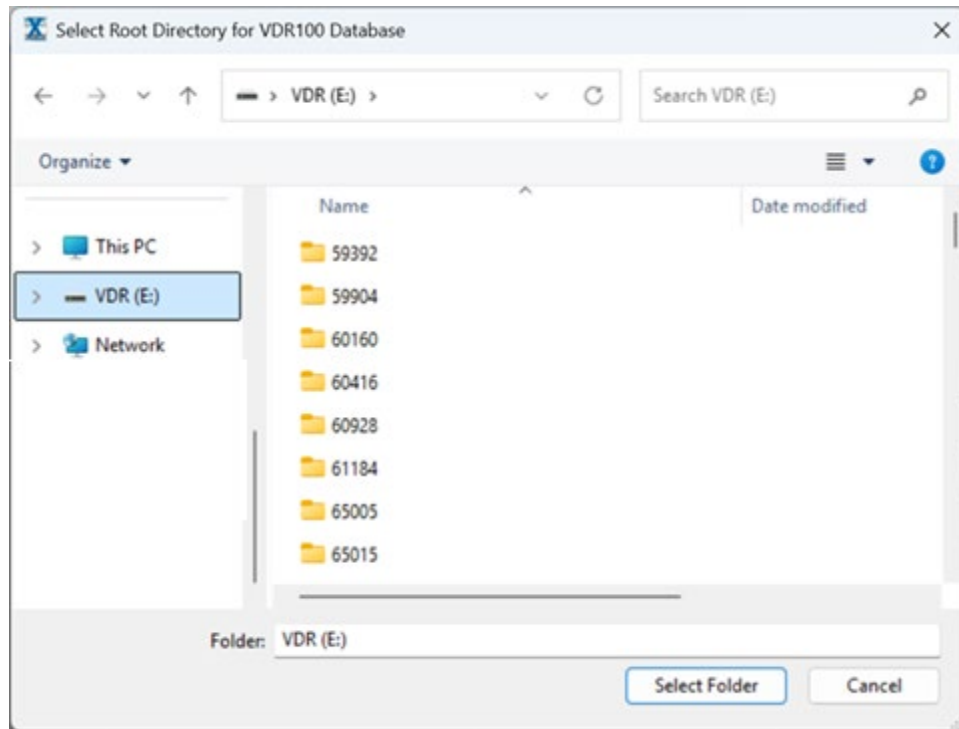

Press OK to open the database. N2KExtractor will start loading the Time Periods from the USB or hard drive.

7.2.1 Microsoft Windows Format Message

When inserting the USB Flash Drive, you may see the following pop-up message on your screen.

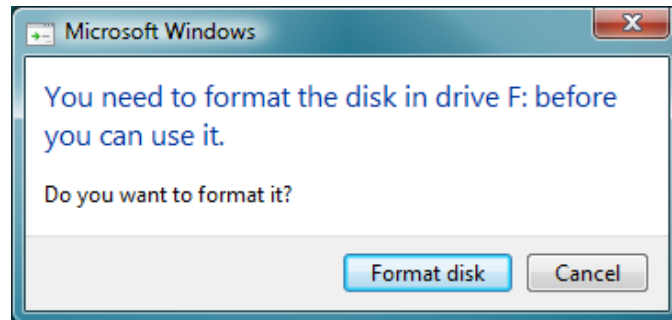


This is because Windows has detected the unusual format of the USB Flash Drive and thinks that the USB Flash Drive is un-formatted. You must press **Cancel**.


Do not Format the disk. Formatting will wipe out all the data saved on the USB Flash Drive.

7.2.2 Ext2 Device Drivers

If the USB Flash Drive is not recognized as containing data from a VDR100, it may be because the Ext2 File system drivers have not been installed on your PC. You will see the following prompt; pressing **OK** will close the dialog box on and next the user will need to install the Ext2 drivers. (see section 5.1)

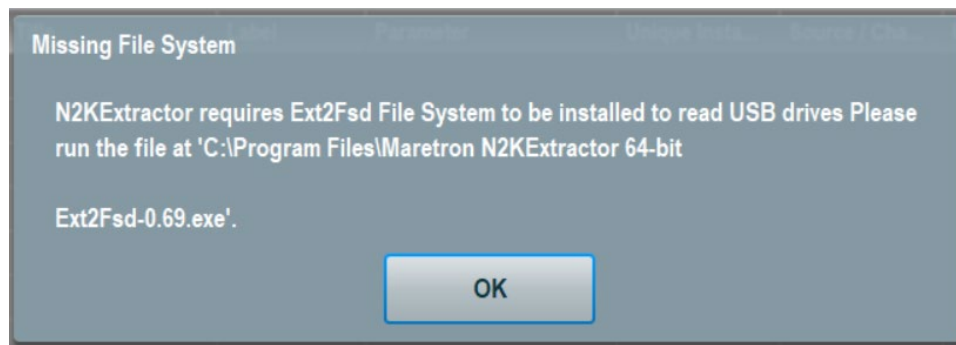


Full instructions on how to install the EXT2 USB Flash Drive Driver may be displayed under the Help menu item.

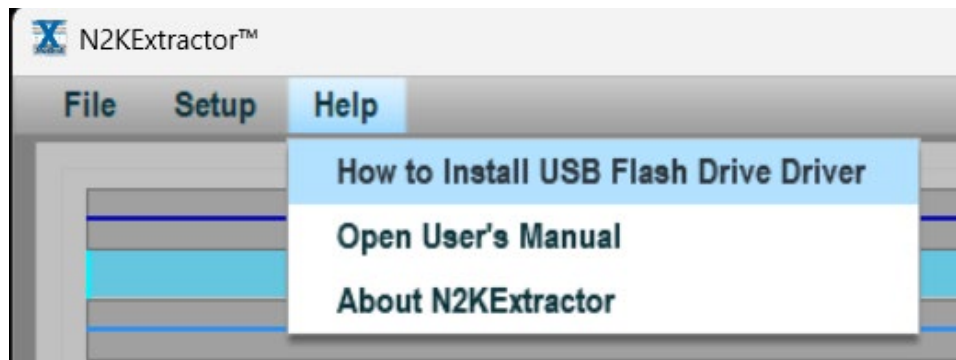


7.3 Open a connection to a VDR100 based on the serial number of the VDR100.

This is the easiest way to connect to a VDR100.

Click on the **File** menu, then **Open VDR Database**, then **Network Connection LAN**.

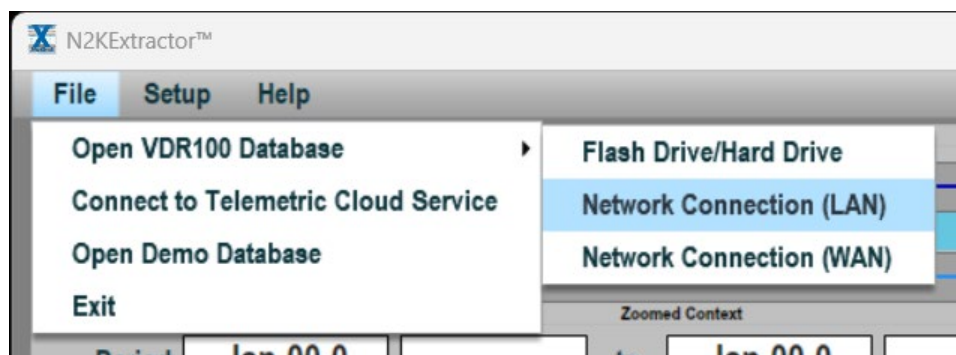

This opens the **LAN Vessels** dialog.

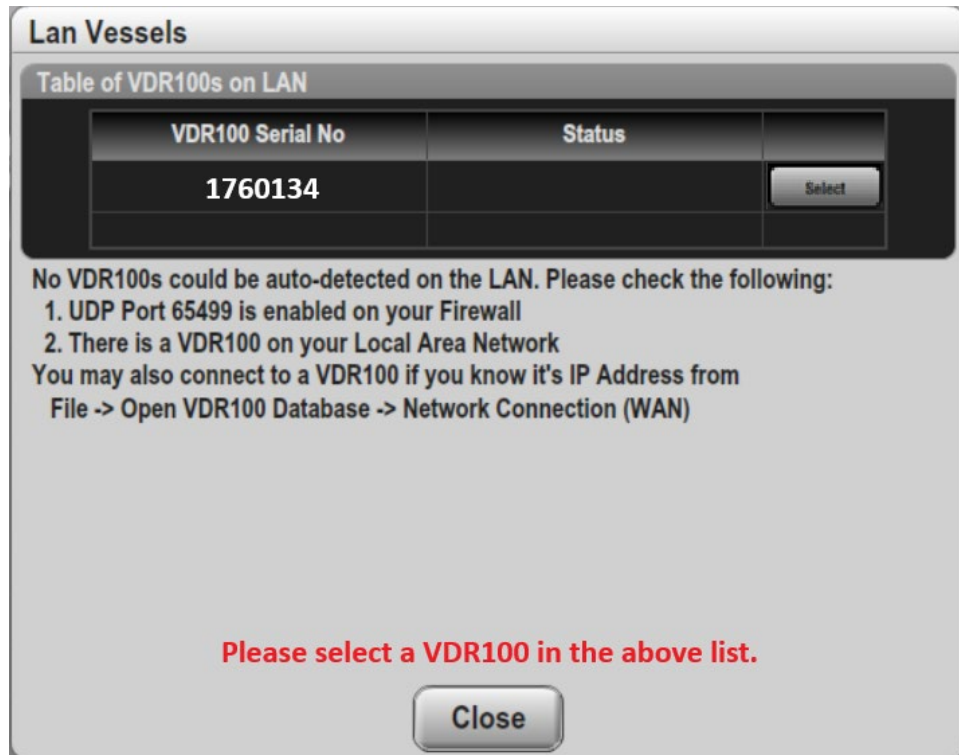


The **Lan Vessels** dialog shows a list of VDR100s that have reported their presence on the network to N2KExtractor.

Select the VDR100 from the list by clicking the Select button on the same row as the serial number. This will connect to the VDR100 and start downloading the Time Periods stored on the VDR100.


7.4 Open a connection to a VDR100 based on the saved vessel table

This is the easiest way to connect to a VDR100.

Click on the **File** menu, then **Open VDR Database**, then **Network Connection WAN**.

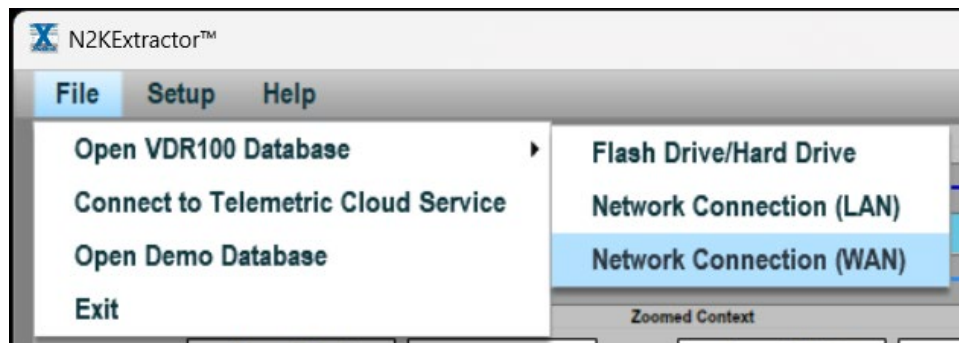

This opens the Vessels Connections dialog

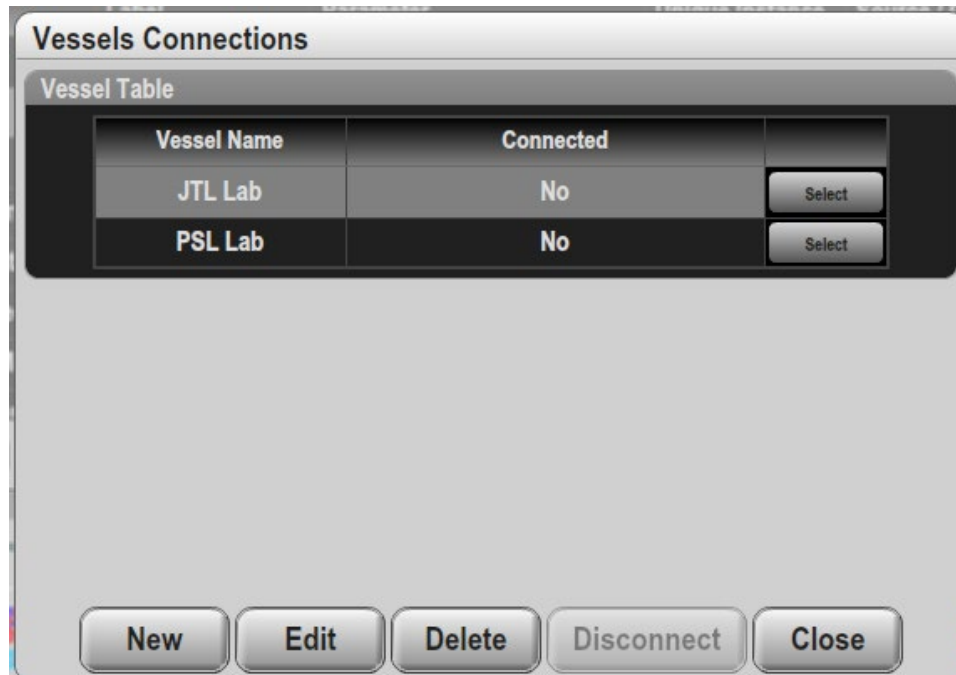


Select a Vessel from the table by pressing the Select button on the same row as the vessel name. This will connect to the VDR100 and start downloading the Time Periods stored on the VDR100. See section 8 for details on managing the Vessel Table.

7.5 Open a connection to vessel data stored on the Telemetric Cloud Service

Maretron's Telemetric Cloud Service stores selected data from MBB200C, MBB300C, TSM800C, TSM810C, TSM1330C or WSV100 for up to a year. This data may be downloaded and displayed using N2KExtractor.

Click on the **File** menu, then **Connect to Telemetric Cloud Service**

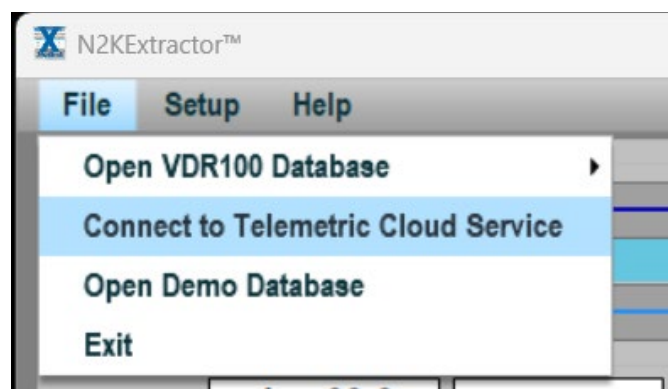

This will open the Telemetric Cloud Service Vessels dialog, which contains a list of vessels that have data stored on the cloud. If you are not already logged in to the Cloud Service, then you will be presented with the User Name and Password dialog that will log you in to the Cloud Service.

The screenshot shows a 'User Name & Password' dialog box. It has two input fields: 'User Name' with the text 'demo' and 'Password' with '*****'. Below these is a checked checkbox labeled 'Save User Name and Password'. A link 'Forgot User Name or Password?' is positioned below the checkbox. At the bottom are three buttons: 'Login to Cloud', 'Cancel', and 'Close'.

Enter your **User Name** and **Password**, then click **Login to Cloud**.

If you have forgotten your User Name or Password, click on **Forgot User Name or Password?** and you will be taken to a website where you can enter your email address to get instructions on how to reset your password.

Once logged in, you will see the list of vessels.

The screenshot shows a window titled 'Telemetric Cloud Service Vessels'. Inside, there is a table titled 'Telemetric Cloud Service Vessel Table'. The table has two columns: 'Vessel Name' and a column with 'Select' buttons. The vessels listed are 'Ferry 1', 'Ferry 104', 'Ferry 304', and 'MConnect'. Below the table, there is a red text prompt 'Please select a Vessel in the above table.' and a 'Close' button.

Vessel Name	
Ferry 1	Select
Ferry 104	Select
Ferry 304	Select
MConnect	Select

Select a Vessel from the table by pressing the Select button on the same row as the vessel name. This will connect to the Cloud start downloading the Time Periods stored on the Cloud Server.

8 Screen Layout


The N2KExtractor screen is divided into 4 areas, shown here after a connection has been established.



The division (indicated in yellow) between the Parameters / Map Area and the Graph Area may be dragged up and down to customize the height of the respective windows.

8.1 Timeline Area

This area is used to select the time interval over which the data will be extracted.

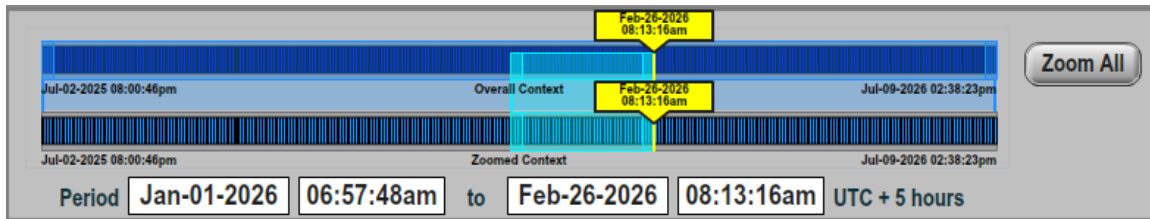


8.1.1 Timeline Bars

The Timeline Area consists of two timeline bars, each with highlight areas, and a yellow cursor with a display of date and time.

When a connection is made, the program will quickly analyze the data and show in the upper bar (the Overall Context bar) the time period covered by the data. The times represented by the ends of the top Time Bar are fixed by the data on the Flash Drive.

Each highlight area may be dragged left or right by “grabbing” near the center of the highlight area, and the ends may be moved by “grabbing” on the small boxes (handles) at either end of the highlight. By moving the ends, the period of time represented by the highlight may be changed. Initially the highlights are set to cover about one third of the full extent of the Time Bar. Pressing the Zoom All button will expand them to cover the entire time span.

The yellow cursor may be dragged by grabbing the yellow box containing the date and time and dragging it left or right. Dragging the yellow cursor on one Time Bar will move the yellow cursor on the other Time Bar to keep them synchronized in time. Right-clicking with the mouse on the yellow cursor will bring up the following menu:

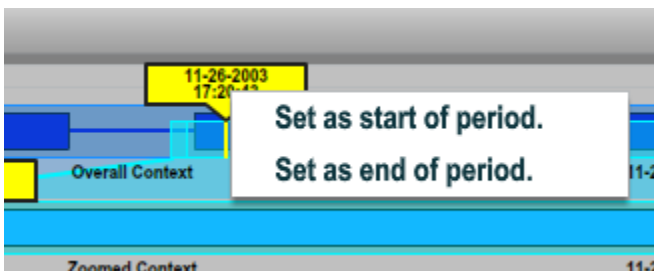

Clicking on **Set as start of period** will move the start of the user selected extraction period to the position of the yellow cursor.

Clicking on **Set as end of period** will move the end of the user selected extraction period to the position of the yellow cursor.

Top Time Bar: The top Time Bar has a double highlighted area. The light blue area corresponds to the extents of the time shown in the bottom bar. By dragging the left and right handles of this highlighted area, changes the total period represented by the bottom Time Bar. This enables you to “zoom in” for more accurate time interval selection. The lower turquoise area corresponds to the time selected from which the data will be extracted.


In a similar way, the **Lower Time Bar** (the Zoomed Context bar) just contains the light blue area and the turquoise area. This means that the lower Time Bar is a zoomed in view of the top Time Bar. The turquoise area of the bottom Time Bar corresponds to the turquoise area of the Top Time Bar; either can be used to define the time period from which the data will be extracted. The dates and times of the turquoise area are displayed just under the bar as the **Period**.

8.1.2 Timeline Data Entry Fields

The data entry fields are positioned just below the timelines.

Period	Jan-01-2026	06:57:48am	to	Feb-26-2026	08:13:16am
--------	-------------	------------	----	-------------	------------

 
Period: The start and end date and time are shown here. These values are synchronized with the highlight area of the lower time bar. You may type specific values in these fields to define the start and end times, and the bars above will follow.

 When the backgrounds of these fields are red, the contents are invalid (e.g. a month may be spelled incorrectly).

When the text is red, the time period represented by previously extracted data does not match the values in the Period boxes. The format of the dates may be changed in the Units Dialog.

8.1.3 Timeline Buttons

 There is one button on the right of this area.



Zoom All: This sets the highlight bars so that they cover the full period of the Drive

8.2 Control Area

This area is used to display messages to the user (on the left) and is home to the buttons used to instruct the program (on the right). The control area buttons change depending on whether the Parameter or Map is active within the Parameter/Map Area. The following are available if the Parameters tab is active.



The following buttons are available if the Map tab is active.



If the text on the buttons is red, then the displayed data is out of sync with the timeline and should be refreshed by pressing that button.

8.2.1 Control Area Buttons

The definitions of the four buttons found within the Control Area are as follows.

Find Params: Pressing this button will extract recorded parameters for all the recording periods chosen in the Timeline Area and populate the Parameters Area. This can be a very long operation if the network is extensive and the period is long. A suggestion is to choose a small period (1 to 2 days) when you know that all devices are active on the bus and find the parameters in this period only.

Unless you are changing devices on the bus frequently, this set of parameters will apply over the entire recording. Once you have established a good set of parameters, save them to disk (see section 8.3.2).

Whenever the recording period is changed, the text in the button will be made red, indicating that the data displayed is not synchronized with the Period shown in the timeline.

Update Route: Pressing this button will extract GPS data for the chosen recording period and display the route on a Map. The maps are downloaded from Google and require an Internet connection. Whenever the recording period is changed, the text in button will be made red, indicating that the data displayed is not synchronized with the Period shown in the timeline.

Graph Params: This extracts data and creates graphs in the graph area. The parameters that are extracted must be selected in the Parameters area before this button is pressed. Only the top four selected parameters will be graphed.

Whenever the recording period is changed, the text in button will be made red, indicating that the data displayed is not synchronized with the Period shown in the timeline.

Export Params: This extracts the data for all the selected parameters to a csv file (see section 8.6). Whenever the recording period is changed, the text in button will be made red, indicating that the data displayed is not synchronized with the Period shown in the timeline.

8.3 Parameter Area

The Parameter Area is shared with the Map Area. Select the Parameters tab to display the Parameters Area.

The Parameter Area may be populated in a number of ways.

- If you know the parameters that are stored by the VDR100 and the respective instance numbers, you may add them manually to the table using the “Add” button. Remove them from the table using the “Delete” button.
- The “Find Parameters” button in the Control Area (see section 8.2.1) will search and populate the table with all the possible parameters that are stored.
- Once the table is populated, it may be saved and then loaded later.

8.3.1 Parameter Table

Available Parameters				Search	gro		Next
Use	Title	Label	Parameter	Unique Instance	Source / Channel	Units	
☐	Warning Level 2		Engine Warning: Warning Level 2	0			
☐	Water Flow		Engine Warning: Water Flow	0			
☐	Water In Fuel		Engine Warning: Water In Fuel	0			
☐	Barometric Pressure		Environment: Barometric Pressure	0	Barometric	inHg	
☐	Outside Temperature		Environment: Outside Temperature	0	Outside	°F	
☐	Sea Temperature		Environment: Sea Temperature	0	Sea	°F	
☐	Altitude		GPS: Altitude	0		NM	
☒	Course Over Ground		GPS: Course Over Ground	0		Degrees	
☐	GPS Mode		GPS: GPS Mode	0			
☐	GPS Op Mode		GPS: GPS Op Mode	0			
☐	HDOP		GPS: HDOP	0			
☐	Lat. / Long.		GPS: Lat / Lon	0		Lat, Lon D M.M	
Unselect All Clear Add Edit Delete Move Up Move Down Load Save							

Parameter selection is done on a table. The table may be sorted on any column by double clicking the header of that column. The column widths may be changed by dragging the lines between headers.

The table has the following columns:

Use: Only parameters with the checkbox selected will be used for data extraction. If the data is displayed in the Graph Area, the check mark will be black; if not displayed then it will be red.

Title: The title that will be shown on the graph for the parameter

Label: The label of the parameter (if present on the NMEA 2000® bus).

Parameter: The category and name of the parameter

Unique Instance: The instance number of the parameter. If we have recorded a label for this instance from the device, then the label is appended to the instance number in parenthesis.

Source / Indicator: Where the parameter requires extra source or indicator values to fully define it, these are displayed in this column (e.g. a number of Circuit Breakers will be reported from the same instance, and each has a specific indicator number, or tank levels have different fluid types).

Units: The units in which the data will be displayed.

The **Search** box may be used to search for values in the Title, Label and Parameter columns.

8.3.2 Parameter Manipulation

Buttons under the table allow the data in the table to be manipulated.

Unselect All: This removes the Use checkmarks from all the entries in the table.

Clear: The parameter table will be cleared.

Add: Press this to manually add a parameter to the table. This will display a tree structure (similar to N2KView) from which you can choose the parameter to add to the list. If a row in the table has been selected, then the new parameter is added immediately following the selected row, otherwise it is added at the end of the table. (See 8.3.3)

Edit: If a row in the table has been selected, pressing this button will display an editor in which the parameter details maybe edited. (See 8.3.4)

Move Up: The highlighted row is moved up in the table. Because only the top 4 selected rows will be graphed, this can be used to move a desired parameter above other parameters


Move Down: The highlighted row is moved down in the table.

Load: The contents of the Parameter table may be loaded from disk.

Save: The contents of the Parameter table may be saved to an. n2e file on disk.

8.3.3 Select Parameter Tree


Adding a parameter by pressing the Add button displays the Select Parameter Tree similar to that used to select parameters in N2KView.

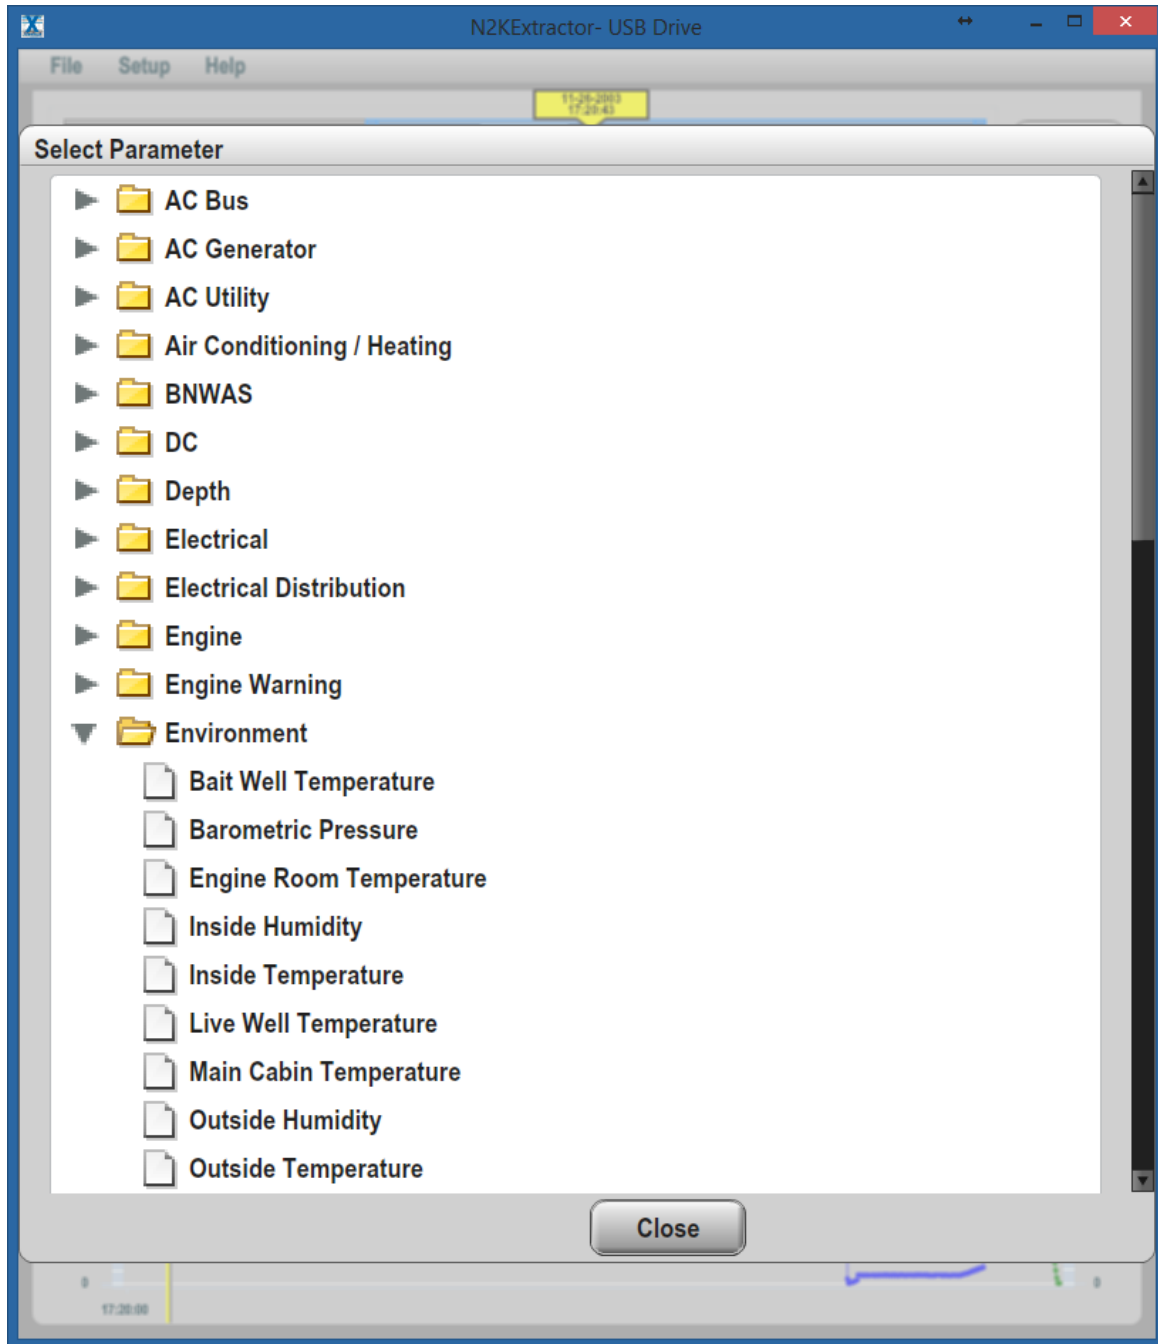

The yellow folders represent the different categories of data, and within each category is the list of parameters. Clicking on a yellow folder will either open or close the folder. Clicking on a parameter will open the Parameter Editor (see 8.3.4) for that parameter.

8.3.4 Parameter Editor

This is similar to the parameter editor in N2KView.

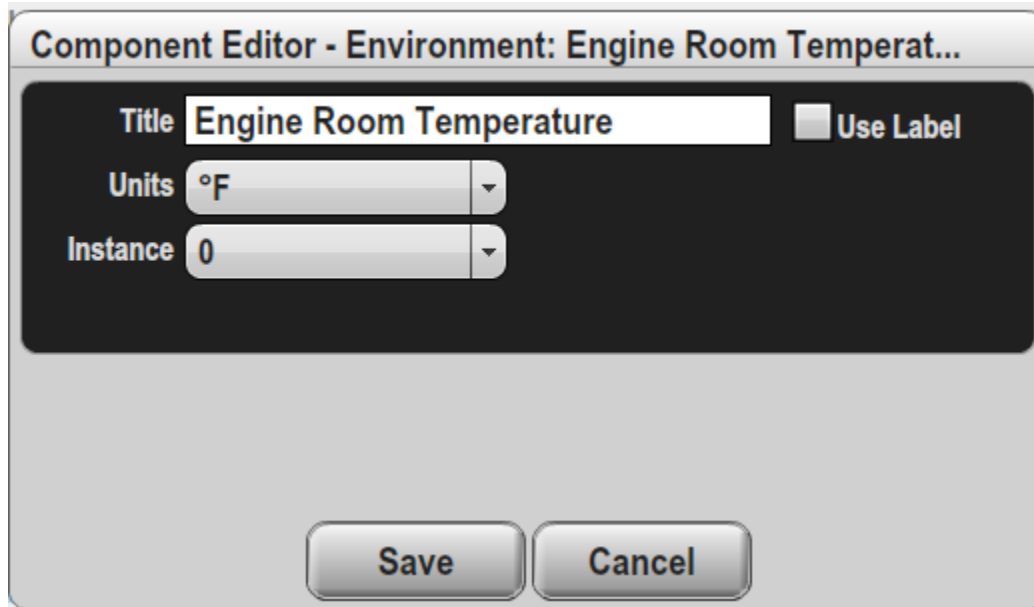

Title: The title of the parameter on the graph. This is user defined.

Use Label: If selected, the graphs will be created using the label field for the series name; if not selected, the Title will be used.

Units: The units in which the data will be displayed. This is populated from a list of default units, set in the Units Dialog (see section 12).

Instance: The unique instance number of the parameter

Indicator: If applicable, this is used to identify the indicator within the instance number.


Save: Pressing this button enters the new data in the table or overwrites the old data.

Cancel: Pressing this button exits the editor without saving any data.


8.4 Map Area

The Map area is shared with the Parameter Area. It displays a map showing the vessels route over the data extraction period. Select the Map tab to display the Map Area.

***An internet connection is required to display the map.**

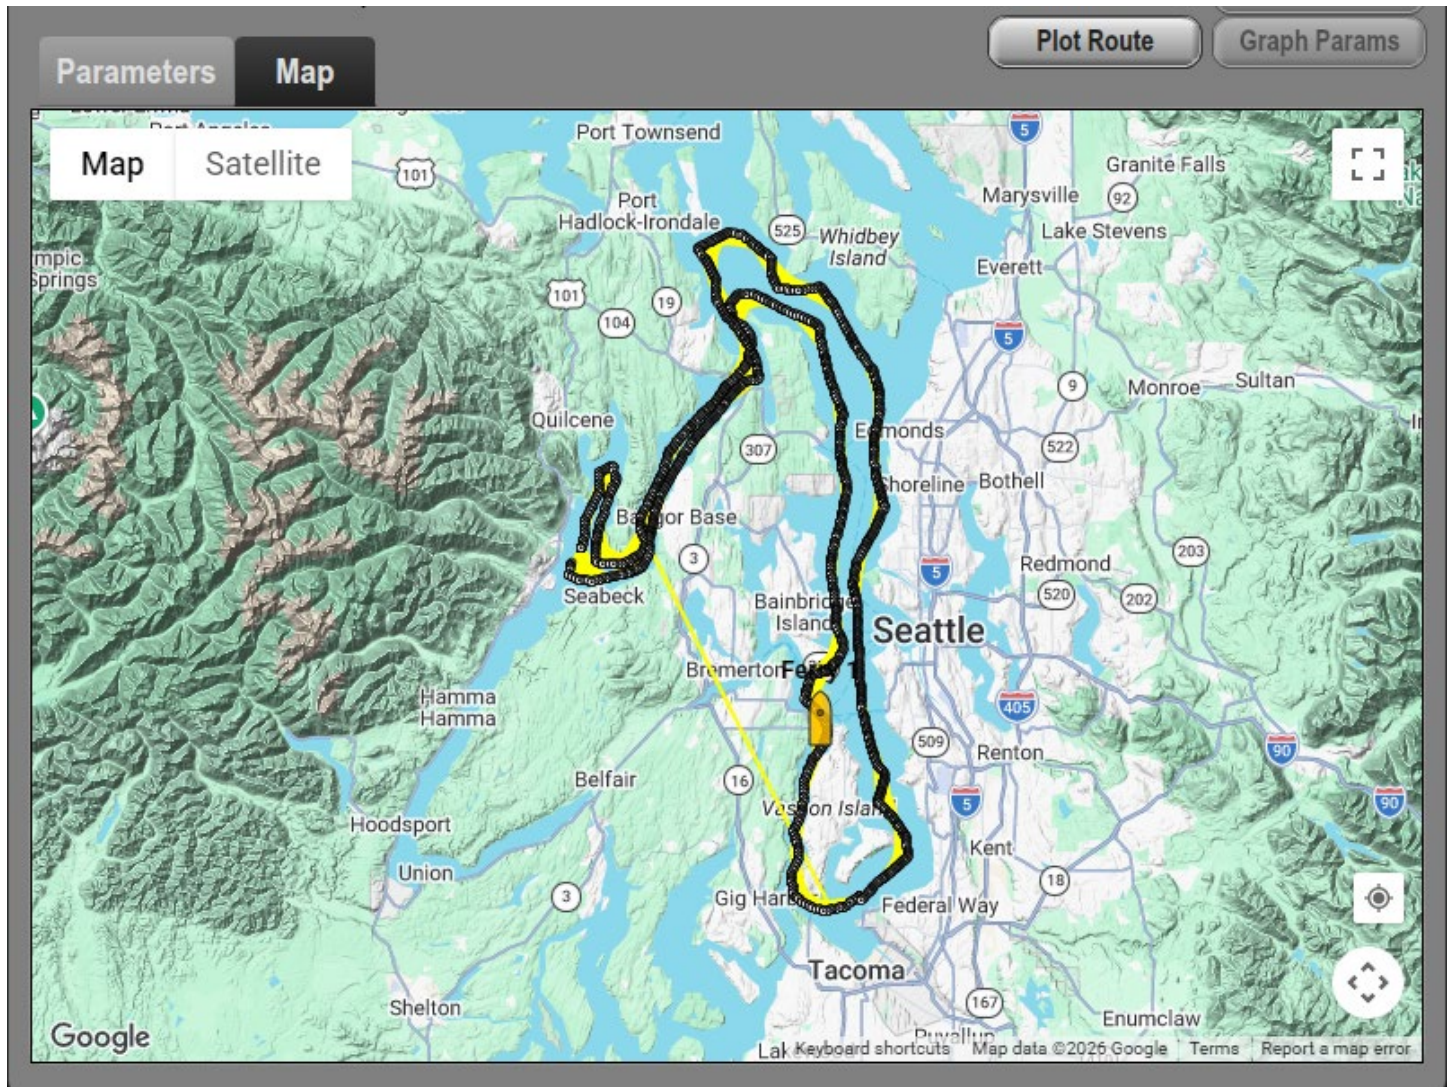

This area displays a simple map from Google showing the position of the vessel at the yellow cursor position of the Timeline Bars, and the route of the vessel over the extraction period in yellow.

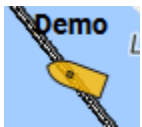


The marker for the vessel may be dragged on the route, and the cursor position on the Timeline Bars and Graph will follow.

Clicking on the track with the left button of the mouse will position the marker for the vessel at the closest route position to the cursor. The yellow cursor positions will synchronize to this time.

Clicking on the boat symbol will display an information window containing the position of the vessel in Latitude and Longitude, plus any parameters that have already been extracted to the Graph Area. Moving the boat or pressing the X on the information window will close the window.

Clicking on any point on the track will with the right button of the mouse will display the following menu:

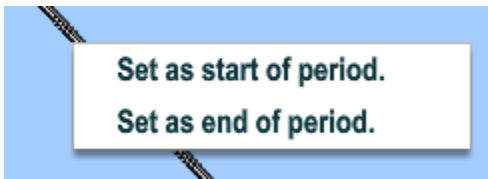

Clicking on **Set as start of period** will move the start of the user selected extraction period to that position on the track.

Clicking on **Set as end of period** will move the end of the user selected extraction period to that position on the track.


The map may be zoomed, moved or scrolled using the controls provided on the map.



Pressing the home button will center the map on the boat symbol. If there is no boat symbol on the map (i.e. there is no boat position for the highlighted time) pressing this control has no effect.

8.5 Graph Area

Up to four parameters may be graphed at once.

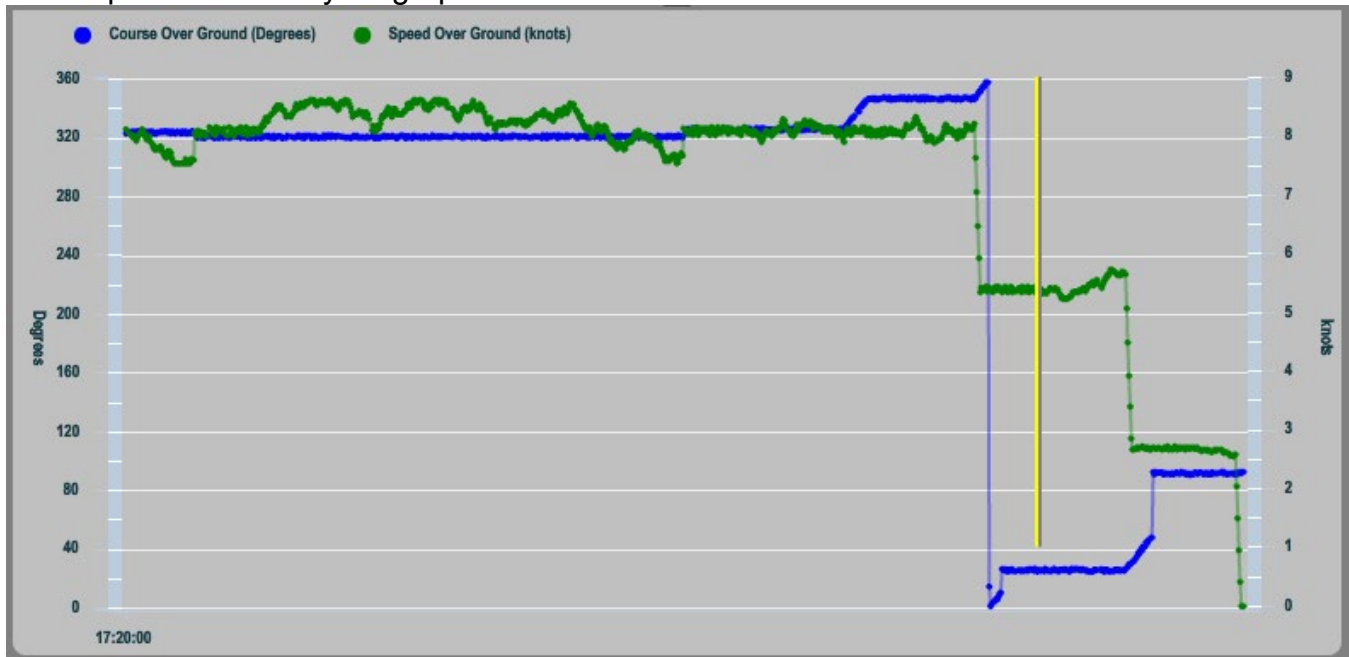

The graph is populated by selecting parameters (see section 8.3.1) and pressing the Extract button (see section 8.2.1). Once the graph has been drawn, more detail can be seen by hovering over a point on the graph with the mouse.

The horizontal axis of the graph represents time. Where the timeline extends over multiple days, the date will be added to the time.

Vertical axes are minimized wherever possible by combining axes of the same data type (e.g. two temperature values will be combined on the same axis at the same scale). Different data types will create different axes, alternating in placement between the left and right of the graph.

The yellow, vertical line may be dragged over the graph. The markers on the Timelines and vessel position on the map will be moved to stay in sync with the yellow line.

Clicking on the graph with the left button of the mouse will position the markers at the mouse position.



Clicking on the yellow line with the right button of the mouse will display the following menu:

Clicking on **Set as start of period** will move the start of the user selected extraction period to the position of the yellow cursor.

Clicking on **Set as end of period** will move the end of the user selected extraction period to the position of the yellow cursor


Clicking on one of the labels just above the graph will cause that parameter to be drawn on top of the other parameters of the graph.

8.6 Exporting to a .csv File

A CSV file is a comma separated values file suitable for importing into a spreadsheet program such as Microsoft Excel. The file has a .csv extension.

Because Excel has a limit of 32000 records per file, the data may be broken up into more than one csv file. These will be numbered sequentially.

Pressing the **Export Params** button in the Control Area of the main screen will show the Export to CSV File Dialog.

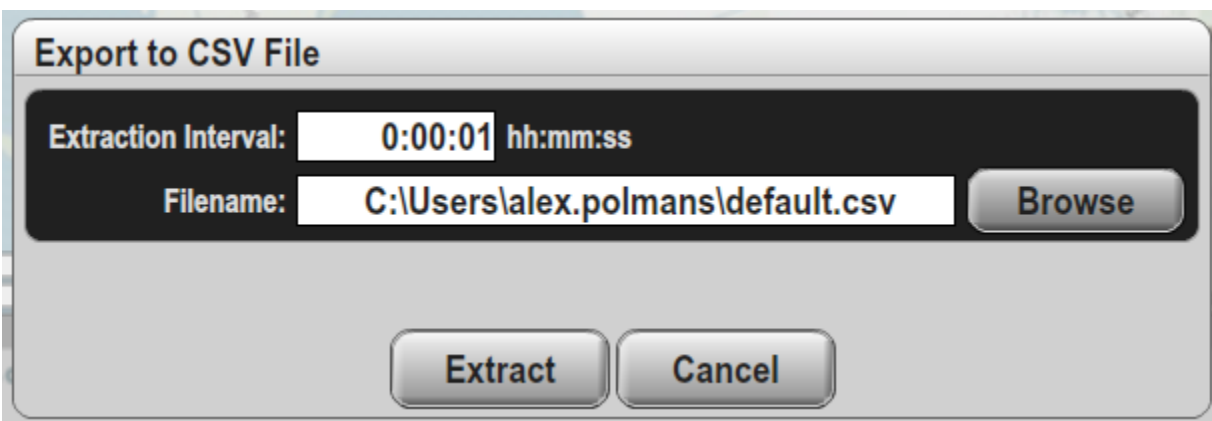

Extraction Interval: Over long periods, if every single data point was extracted, the graphs or extracted data would result in long processing times and excessively large files. From the period selected by the timeline bars or Period fields, the Extraction Interval is pre-populated to give about 1000 entries. This may be changed by the user to increase or decrease the number of points in the files. Decreasing the interval will increase the processing time. Setting a value of zero (0) will cause every point to be extracted.

Note that the time taken to fetch and process the data will increase as the number of sample points increases. Setting a very small sample interval may cause the program to run very slowly.


Filename: The data will be stored in this file. Select the filename by typing, or by pressing the **Browse** button.

Extract button. The data extraction will take place when this button is pressed.

Cancel button. This returns you to the main screen without doing the extraction.

8.7 Long Running Operations

Long running operations will display the following dialog while they are executing.

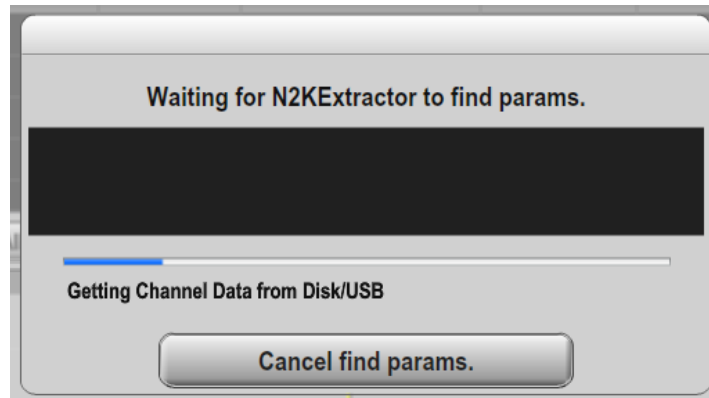

If it is possible to estimate the time remaining in the current operation, this estimate will be displayed as part of the message. Note that this is an estimate; gaps in the data and other factors in the VDR100 will cause errors in the value displayed.


Press the **Cancel** Button to cancel the operation. If the operation has requested data from the VDR100, the operation cannot be cancelled until the data is returned. You will be informed that your request to cancel has been noted, and the dialog will be removed when the VDR100 responds.

9 Menus

Drop down menus are accessed from the menu bar at the top of the screen.

9.1 File Menu

The first four entries manage databases produced by the VDR100.

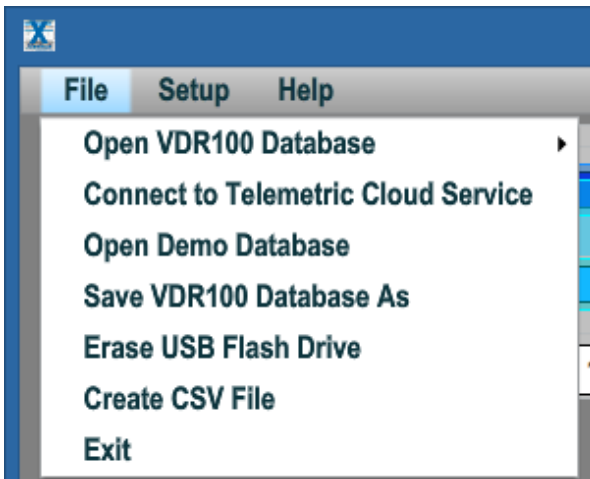

Open VDR100 Database: This opens a submenu where the user can choose to open a database on a USB drive or hard disk, make a direct connection to a VDR100, or access a previously defined vessel in the Vessel Database through the Vessels Dialog, which is explained in section 10

Connect to Telemetric Cloud Service: This connects to the Telemetric Cloud Server. The user must log on to the server and then select a vessel from the list available.

Open Demo Database: This opens the database containing demonstration data.

Save VDR100 Database As: This saves the currently opened VDR100 database to the hard drive. The user will be prompted to enter a filename for the database.


Erase USB Flash Drive: The USB Flash Drive will be marked for erase by the VDR100 when it is next inserted into the VDR100. The user will be prompted to confirm this operation. This entry will only be displayed when connected to a USB Drive.

Create CSV File: This extracts the parameters defined in the current configuration and creates a CSV (Comma Separated Values) file with the extension .csv containing the data extracted. This file can be imported into a spreadsheet program such as Excel for further analysis. Because Excel has a limit of 32000 records per file, the data may be broken up into more than one csv file. These will be numbered sequentially.

Exit: Exit the program.

9.2 Setup Menu

The following entries are available in the Setup Menu drop down.

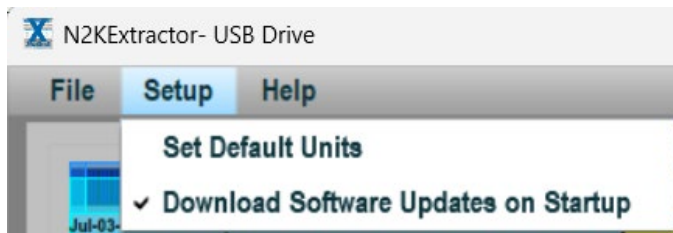

Set Default Units: This opens a dialog in which the default units and date format can be set (section 12)

Download Software Updates on Startup: When checked, the N2KExtractor program will look for program updates on the Maretron web page every time it is started. If an update is detected, the user will be asked if the update should be downloaded and installed.

9.3 Help Menu

The following entries are available in the Help Menu drop down.



How to Install USB Flash Drive Driver: Displays a pdf file containing instructions on how to install the drivers for the Ext2 File System used by the USB Flash Drive.

Open User's Manual: Opens the N2KExtractor User's Manual in a separate window.

About N2KExtractor: Displays the About Dialog.



This shows the software version number of the program.


10 Vessel Connections Dialog

When unpacking the box containing the Maretron RIM100, you should find the following items:

In version 2.0 of N2KExtractor, Maretron introduces the concept of Vessel Connections. For fleet managers using N2KExtractor, each vessel in the fleet is given an entry in the Vessels Connections table and named. This information is stored so that it is always available to make connections to different vessels as simple as possible.

For each vessel, up to two different ways of connecting may be specified, to allow for on-board or remote connections without having to reconfigure.

10.1 Vessel Table

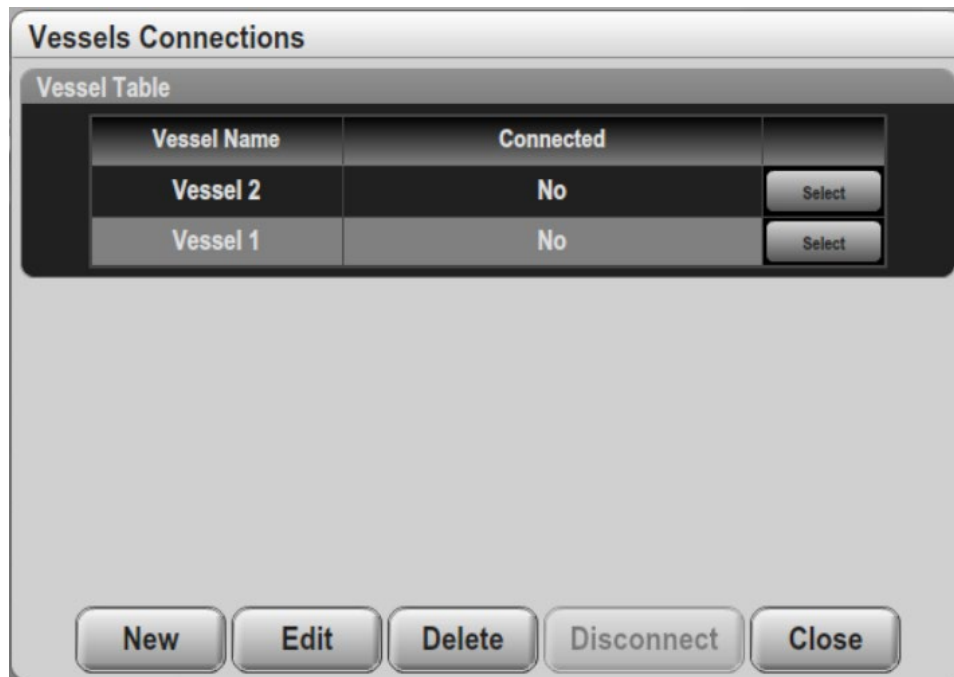

The Vessel Table has three columns

Vessel Name: This is the user supplied name of the vessel.

Connected: This column shows which of the vessels are currently connected to N2KExtractor. Only one vessel may be connected at a time. The status of the VDR100 will be displayed for the connected VDR100.

Select: This column contains the buttons that must be pressed to select a vessel. Pressing the button will immediately connect to the VDR or database.

10.2 Vessel Table Buttons

New: Press this button to create a new entry in the Vessel Table. The Connections Settings Dialog will be opened (see section 11).

Edit: If a vessel has been selected in the table, it may be edited by pressing the Edit button. The Connections Settings Dialog will be opened (see section 11).

N2KExtractor User's Manual

Delete: If a vessel has been selected in the table, it may be deleted by pressing the Delete button. A confirmation dialog will be displayed to prevent accidental deletions.

Connect / Disconnect: If a vessel is selected in the table, and that vessel is connected to N2KExtractor, the Disconnect button can be used to disconnect from the vessel. If no vessels are connected, then the Connect button can be used to attempt to make a connection.

Close: This button closes the Vessels Connections dialog box.

11 Connections Settings Dialog

When unpacking the box containing the Maretron RIM100, you should find the following items:

The Connections Settings Dialog is used to manage the connections to a single vessel. In the following diagram, the connections settings dialog is shown in the disconnected state. Most changes to the connections may only be made while disconnected.

Connections

Vessel Name:

Available Connections: Click or Touch a Connection from the list to Select

VDR100 [SN:2097151] found at 10.0.0.38	
VDR100 [SN:1760134] found at 10.0.0.15	

☒ Use 1st Connection: LAN Serial No.: Password:

☐ Use 2nd Connection: LAN Serial No.: Password:

In Demo Mode

Please enter a Vessel Name

The dialog is divided into four areas:

Vessel Name: The name by which this vessel is identified in the Vessels Connections dialog.

Available Connections: N2KExtractor will attempt to identify all the VDR100 devices on the Ethernet, and list them here to help make connecting to a VDR100 as easy as possible. If a valid USB drive has been plugged into the PC it will also be listed. Select an entry in the table and press one of the “Use Selected” buttons to transfer this data to the Connection area.

 
Connection Area: This area contains two identical lines, to allow options to connect to the same vessel.

If the option is to be considered as a way to connect to the vessel, the checkbox on the left must be checked. If it is not checked, the line will be ignored.

If the VDR100 has been set up with a password, then the password must be entered in the Password field before the VDR100 will supply data.

The contents of each line will change based on the method of connection.

- LAN: If the VDR100 is on the same network as the PC running N2KExtractor, it is best to identify the VDR100 by its Serial number. This way, if the network controller assigns a new IP address to the VDR100, N2KExtractor can still find it on the network and connect to it.



A screenshot of a software interface for LAN connection. It features a dark grey background with white text. On the left, 'Use 1st Connection:' is followed by a checked checkbox. To its right is a dropdown menu currently showing 'LAN'. Further right, 'Serial No:' is followed by a text box containing '1779901'. On the far right, 'Password:' is followed by a text box containing '*****'.

- WAN: If the VDR100 is on a different network to the PC, it may be accessed via a bridge with port forwarding. The WAN option allows the entry of the IP address and port number required by the bridge. This method may also be used to access a VDR100 on the same network using its IP address.



A screenshot of a software interface for WAN connection. It features a dark grey background with white text. On the left, 'Use 1st Connection:' is followed by a checked checkbox. To its right is a dropdown menu currently showing 'WAN'. Further right, 'IPAddr/Hostname:' is followed by a text box containing '10.0.0.202'. To the right of that, 'Port:' is followed by a text box containing '6544'. On the far right, 'Password:' is followed by a text box containing '*****'.


- USB Drive: If the data is to be read off a USB Drive plugged into the PC, this option should be chosen.



A screenshot of a software interface for USB Drive connection. It features a dark grey background with white text. On the left, 'Use 1st Connection:' is followed by a checked checkbox. To its right is a dropdown menu currently showing 'USB Drive'.


When connecting to the vessel and both lines are selected, N2KExtractor will attempt to make one connection after the other until a connection is successfully made.

Connection State: This is a display area containing messages about the state of the connections, and buttons to enable the connection to be made (Connect) and broken (Disconnect). This is an example of the connection state to a VDR100, when connected using the LAN method. The VDR100 is busy recording.

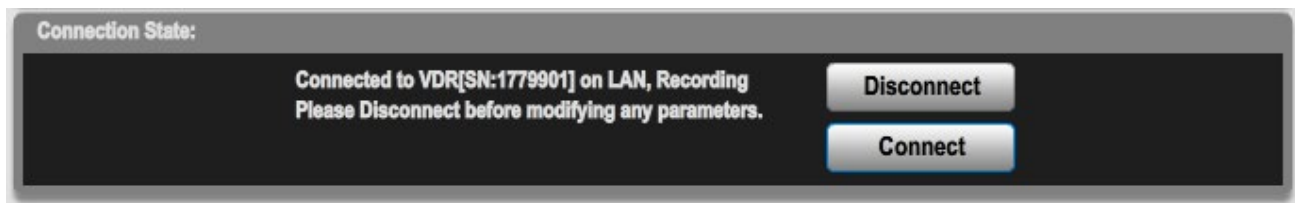

A screenshot of a 'Connection State' window. It has a dark grey background with white text. The text reads: 'Connected to VDR[SN:1779901] on LAN, Recording' followed by 'Please Disconnect before modifying any parameters.' To the right of this text are two buttons: 'Disconnect' (top) and 'Connect' (bottom), both with blue text on a grey background.

12Units Setup

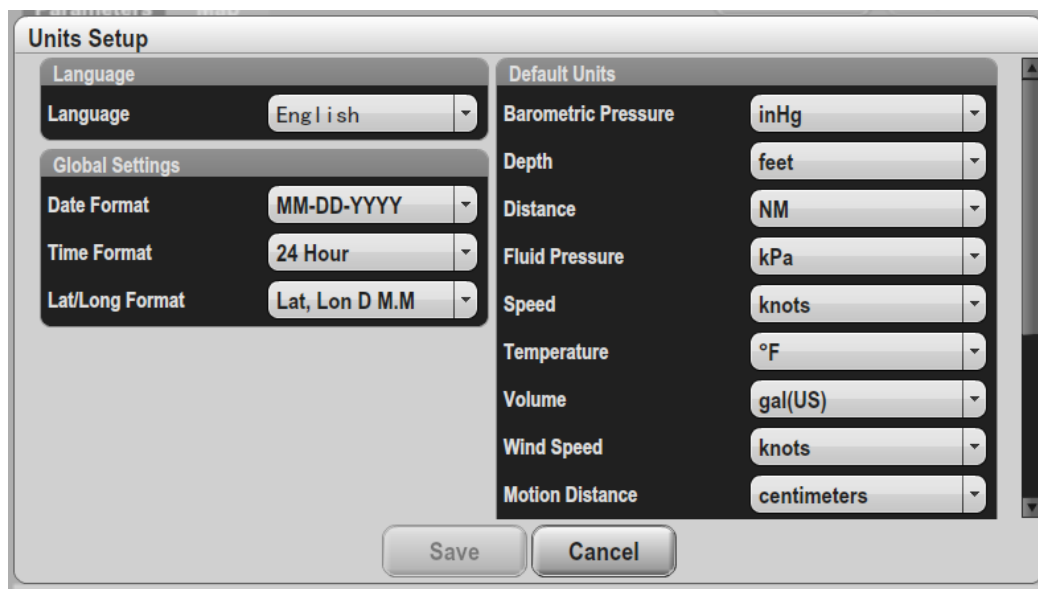

While it is possible to customize units for each parameter in which the data is presented (see section 8.3.4), this dialog provides a way to set common units that will be used as defaults.

Note that changing the defaults after the Parameter Table is populated does not change anything already in the table.

Language – for now, the language is restricted to English

Date Format – This controls how the dates are presented on all the dialogs and graph X axis.

DD-MM-YYYY
DD/MM/YYYY
DD-MMM-YYYY
MM-DD-YYYY
MM/DD/YYYY
MMM-DD-YYYY
YYYY-MM-DD
ISO 8601

Options are:

DD – show the date as two digits

MM – show the month as a two digit number

MMM – show the month as three characters (MMM) (e.g. “Jan”)

The month may be shown before or after the date

The date, month, and year may be separated by dashes (-) or slashes (/)

The date and time may be shown in the ISO 8601 format which is

YYYY-MM-DDThh:mm:ss.sss (the T is printed as part of the value).

Time Format – This controls how the times are presented on all the dialogs and graph X axis.


12 Hour
24 Hour

Options are:

a 12 hour format followed by “am” or “pm”,

a 24 hour format.

Lat/Long Format – This controls how the Latitude / Longitude positions are presented on all the dialogs.

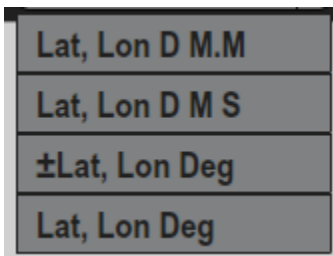

Options are:
degrees (and fractions of a degree) followed by N, S, E, W
degrees (and fractions of a degree) preceded by a negative sign for S or W.
degrees and minutes,
degrees, minutes and seconds.

13 Technical Support

If you require technical support for Maretron products, you can reach us in any of the following ways:

Toll Free: 1-866-550-9100
Phone: 1-603-324-7900
E-mail: support@maretron.com
Customer Portal: Customer.Raymarine.com
World Wide Web: <http://www.maretron.com>
Mail: Raymarine-Maretron FL Service Center
120 Intracoastal Pointe Drive
Jupiter, FL 33477
USA

