

WSO200

Ultrasonic Wind / Weather Station

User's Manual

Revision 1.0

Copyright © 2023 Carling Technologies, Inc. All Rights Reserved

Maretron, a Littelfuse Brand
120 Intracoastal Pointe Dr.
Jupiter FL 33477 USA
<http://www.maretron.com>

Revision History

Revision	Description
1.0	Original document.

Table of Contents

1	Introduction	1
1.1	Firmware Revision.....	1
1.2	WSO200 Features.....	1
2	Installation.....	1
2.1	Unpacking the Box	1
2.2	Choosing a Mounting Location	1
2.3	Mounting the WSO200	2
2.3.1	Mounting the WSO200 to a Standard Marine Pole Mount.....	2
2.4	Connecting the WSO200.....	4
2.4.1	Checking Connections.....	5
2.5	Configuring the WSO200.....	5
2.5.1	Device Label.....	5
2.5.2	Installation Offset Calibration.....	5
2.5.3	Wind Data Damping Period	5
2.5.4	Barometric Pressure Offset Calibration	5
2.5.5	Outside Humidity Offset Calibration.....	5
2.5.6	Outside Temperature Offset Calibration	6
2.5.7	Advanced Configuration.....	6
3	Operation	7
3.1	Ultrasonic Wind Speed Sensing	7
4	Maintenance	8
4.1	Replacing the Humidity Sensor	8
5	Troubleshooting	10
6	Technical Specifications.....	11
7	Technical Support.....	12
8	Maretron (2 Year) Limited Warranty.....	13

Table of Figures

Figure 1	– Mounting the WSO200 to a Standard Marine Pole Mount.....	3
Figure 2	– WSO200 Interface Connector.....	4
Figure 3	– NMEA 2000® Connector Face Views	4
Figure 4	- Replacing the Humidity Sensor	9

Table of Appendices

Appendix A	– NMEA 2000 Interfacing	A1
------------	-------------------------------	----

This page intentionally left blank.

1 Introduction

Congratulations on your purchase of the Maretron WSO200 Ultrasonic Wind / Weather Station. Maretron has designed and built your WSO200 to the highest standards for years of reliable, dependable, and accurate service.

The Maretron WSO200 is designed to operate within the harsh demands of the marine environment. However, no piece of marine electronic equipment can function properly unless installed and maintained in the correct manner. Please read carefully and follow these instructions for installation and usage of the Maretron WSO200 in order to ensure optimal performance.

1.1 Firmware Revision

This manual corresponds to WSO200 firmware revision 1.0.x .

1.2 WSO200 Features

The Maretron WSO200 has the following features.

- NMEA 2000® Interface
- Ultrasonic Wind Sensor
- Field Replaceable Relative Humidity Sensor
- Barometric Pressure Sensor
- Temperature Sensor
- Waterproof Enclosure and Cable System

2 Installation

2.1 Unpacking the Box

When unpacking the box containing the Maretron WSO200, you should find the following items:

- 1 - WSO200 Ultrasonic Wind/Weather Station
- 1 - Pole Mount Base
- 3 - Mounting Screws and Lock Washers
- 1 - WSO200 User's Manual
- 1 - Warranty Registration Card

If any of these items are missing or damaged, please contact Maretron.

2.2 Choosing a Mounting Location

The selection of a suitable mounting location is important for the optimal performance of the Maretron WSO200. The mounting location and orientation of the WSO200 should be:

1. *Level with the earth's horizontal plane* – This gives the WSO200 wind/weather sensor the best accuracy of wind speed and direction over the widest range of heel angles.

2. *High Enough to have a clear view of the sky to the horizon in all directions unblocked by sails or boat structures* – The WSO200 provides the best readings when wind through it is unimpeded by sails or structures on the boat.

2.3 Mounting the WSO200

The Maretron WSO200 can be mounted on top of a 1" 14 threads per inch standard marine pole mount (Section 2.3.1).

2.3.1 Mounting the WSO200 to a Standard Marine Pole Mount

Screw the included WSO200 mounting bracket to the standard marine pole mount. If you do not have a device capable of configuring installation offset in the WSO200, ensure that the pole mount is oriented as follows: the pole mount base has three small holes for mounting screws and one larger hole for the humidity sensor. Ensure that the small (mounting screw) hole which is nearest the larger (humidity sensor) hole is oriented such that it faces directly forward in the vessel. If you do have a device capable of configuring installation offset in the WSO200, you may mount the sensor in any orientation and adjust for it by configuring the installation offset appropriately (please refer to the display user's manual for details).

Route the NMEA 2000® cable through the standard marine pole mount and the pole mount base and connect it to the WSO200 unit (see Section 2.4 below). Finally, attach the WSO200 to the pole mount base using the included brass mounting screws and lock washers as shown in Figure 1. Do not use threadlocking compounds containing methacrylate ester, such as Loctite Red (271), as they will cause stress cracking of the plastic enclosure.



WARNING

- When installing the WSO200 to a standard marine pole mount, be sure to first screw the WSO200 mounting bracket to the pole mount. Then, attach the WSO200 to the WSO200 mounting bracket with the three screws which connect these two components. **DO NOT** first attach the WSO200 mounting bracket to the WSO200 with the three screws and then screw the entire assembly onto the pole mount. Doing this will put excessive torque on the NMEA 2000 connector from the attached cable and cause damage to the connector which is not covered under the product warranty.
- Likewise, when uninstalling the WSO200 from a standard marine pole mount, be sure to first remove the three screws attaching the WSO200 to the WSO200 mounting bracket. **DO NOT** first unscrew the entire assembly from the pole mount before removing the three screws. Doing this will put excessive torque on the NMEA 2000 connector from the attached cable and cause damage to the connector, which is not covered under the product warranty.

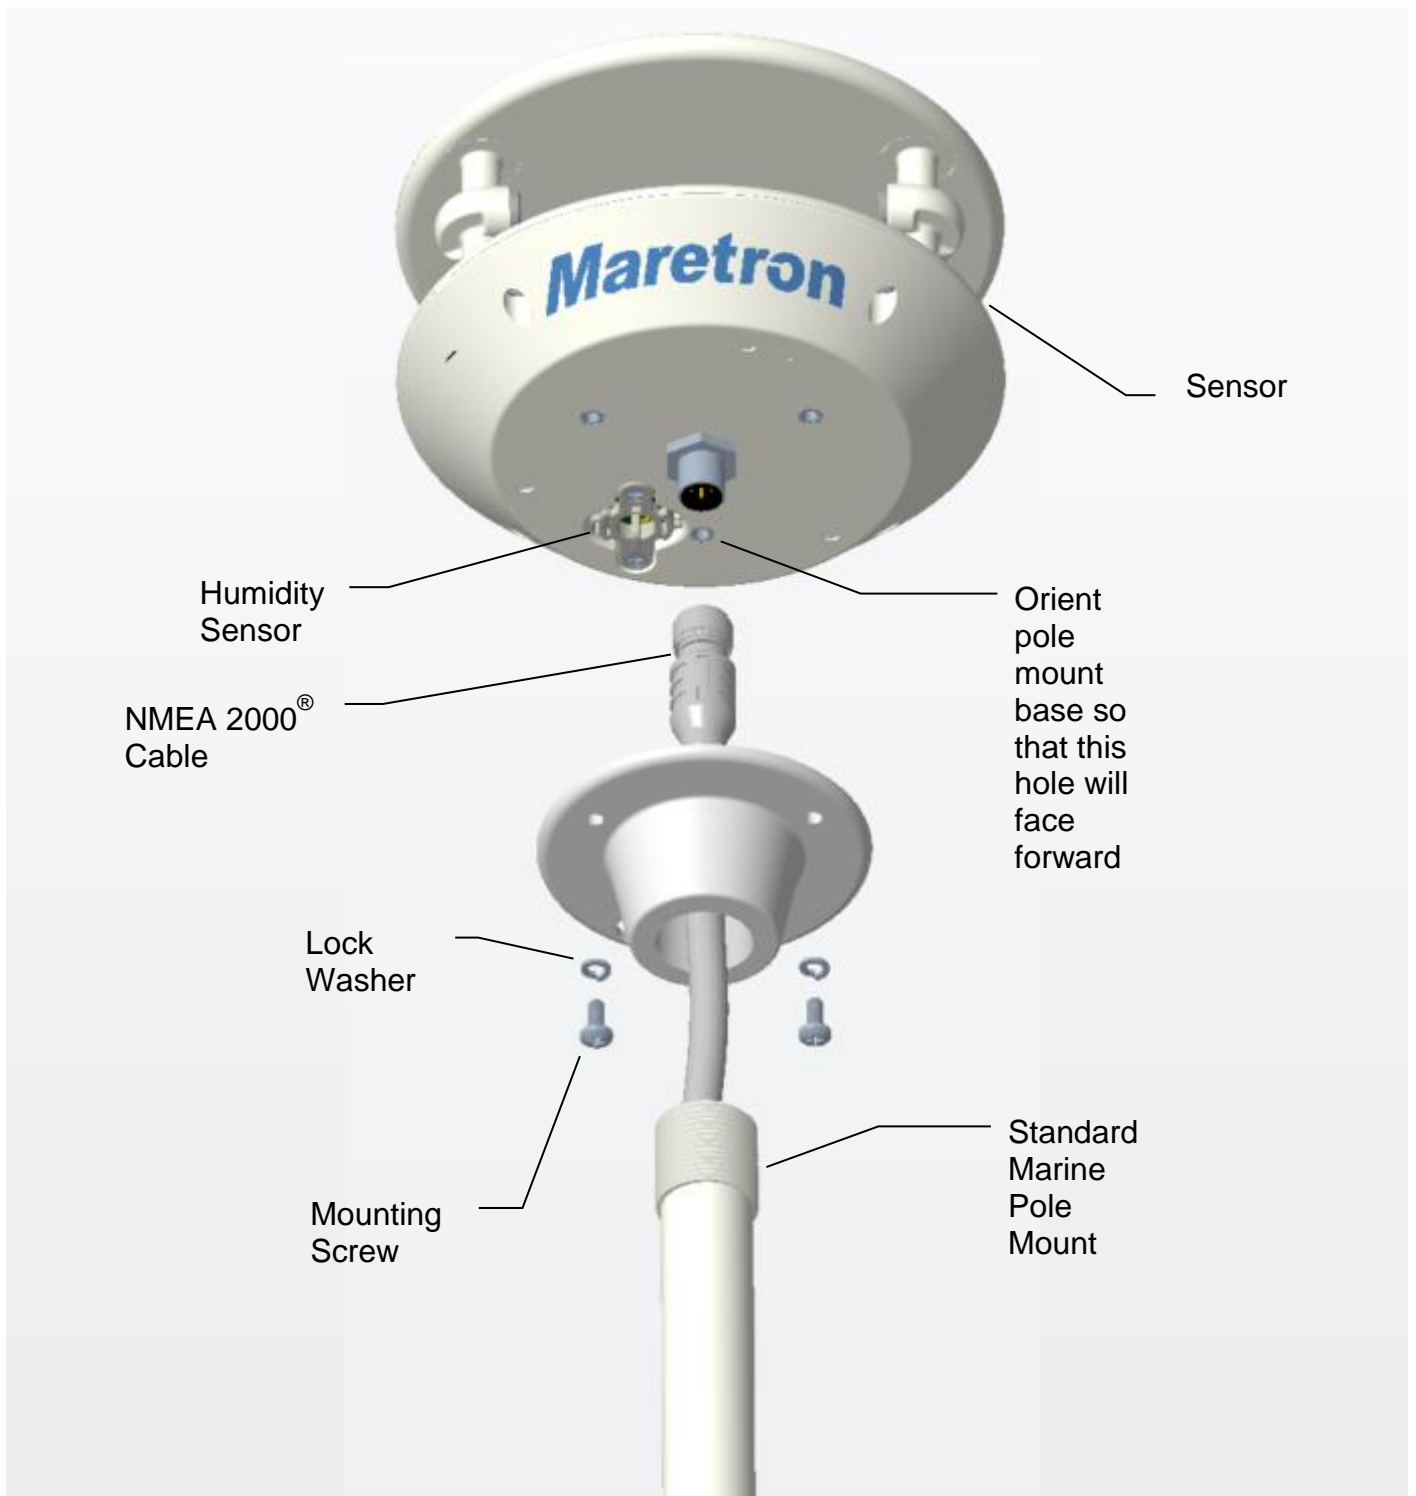


Figure 1 – Mounting the WSO200 to a Standard Marine Pole Mount

2.4 Connecting the WSO200

The Maretron WSO200 provides a connection to an NMEA 2000® interface through a connector that can be found on the bottom of the device (see Figure 2).



Figure 2 – WSO200 Interface Connector

The NMEA 2000® connector is a five-pin male connector (see Figure 3). You connect the WSO200 to an NMEA 2000® network using a Maretron NMEA 2000® cable (or compatible cable) by connecting the female end of the cable to the WSO200 (note the key on the male connector and keyway on the female connector). Be sure the cable is connected securely and that the collar on the cable connector is tightened firmly. Connect the other end of the cable (male) to the NMEA 2000® network in the same manner. The WSO200 is designed such that you can plug or unplug it from an NMEA 2000® network while the power to the network is connected or disconnected. Please follow recommended practices for installing NMEA 2000® network products.

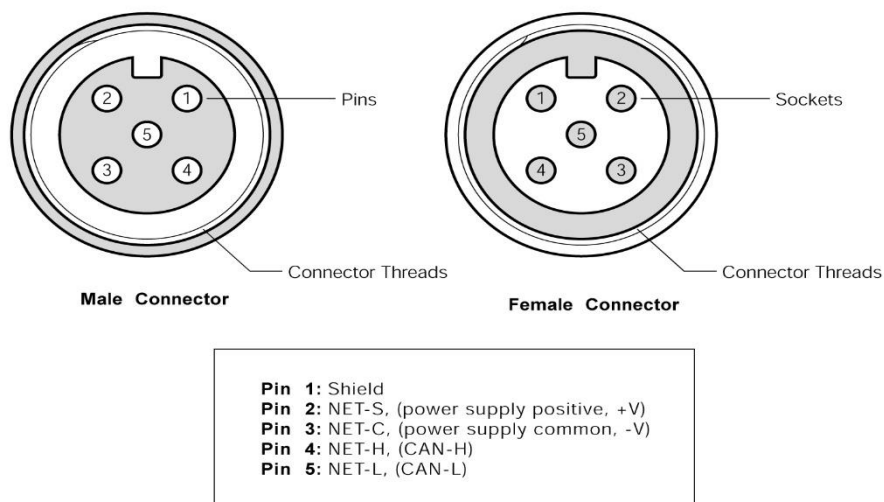


Figure 3 – NMEA 2000® Connector Face Views

2.4.1 Checking Connections

Once the NMEA 2000® connection to the Maretron WSO200 has been completed, check to see that wind speed information is being properly transmitted by observing an appropriate display. Refer to Section 5, “Troubleshooting”, if no heading information appears.

2.5 Configuring the WSO200

The WSO200 has several configurable parameters, which are shown in the following sections. If you are not using the default values, then you will need to refer to the corresponding section for configuring the WSO200 appropriately.

The WSO200 can be configured in any of the following ways:

- DSM410 Multifunction Display
- DSM570 Multifunction Display
- N2KAnalyzer Network Analysis / Configuration Software. This will require a Windows PC and one of the following:
 - USB100 NMEA 2000/USB Gateway, or
 - IPG100 Internet Protocol Gateway

2.5.1 Device Label

Program this parameter with a text string which identifies this device. Maretron display products will display this label text when you are selecting data to display.

2.5.2 Installation Offset Calibration

You may compensate the wind direction readings transmitted by the WSO200 in order to create a 0° apparent wind direction when the wind is blowing directly onto the bow of the boat. This compensates for installations where the WSO200 is not aligned exactly with the boat’s centerline.

2.5.3 Wind Data Damping Period

You may adjust the damping that the WSO200 applies to transmitted wind speed and direction readings. The WSO200 comes from the factory preset with a damping period of 1.5 seconds, which should be appropriate for most applications. However, you may tune the damping period to anywhere between 0.1 seconds and 5.0 seconds if you desire.

2.5.4 Barometric Pressure Offset Calibration

If you wish to apply an offset to the barometric pressure reported by the WSO200, you may change the barometric pressure to match the value you wish displayed, which will create and apply an offset to future barometric pressure readings.

2.5.5 Outside Humidity Offset Calibration

If you wish to apply an offset to the humidity reported by the WSO200, you may change the humidity to match the value you wish displayed, which will create and apply an offset to future humidity readings.

2.5.6 Outside Temperature Offset Calibration

If you wish to apply an offset to the temperature reported by the WSO200, you may change the temperature to match the value you wish displayed, which will create and apply an offset to future temperature readings.

2.5.7 Advanced Configuration...

Certain parameters do not normally need to be set for normal operation but are included in an advanced configuration section for use in special situations.

2.5.7.1 Device Instance Configuration

This entry allows you to program the NMEA 2000 device instance for the unit. You usually will not need to modify the default value of "0" unless you have multiple units on the network. Device instance is always used in the Wind PGNs.

2.5.7.2 Instance – Humidity Configuration

This entry allows you to program the NMEA 2000 device instance for the humidity transmitted in PGN 130313. You usually will not need to modify the default value of "0" unless you have multiple humidity sensors on the network.

2.5.7.3 Instance – Pressure Configuration

This entry allows you to program the NMEA 2000 device instance for the air pressure transmitted in PGN 130314. You usually will not need to modify the default value of "0" unless you have multiple pressure sensors on the network.

2.5.7.4 Instance – Temperature Configuration

This entry allows you to program the NMEA 2000 device instance for the temperature transmitted in PGN 130312. You usually will not need to modify the default value of "0" unless you have multiple temperature sensors on the network. Note that the TMP100 module also generates these PGNs.

2.5.7.5 Installation Description Configuration

The WSO200, along with all other certified NMEA 2000 devices, has two user-programmable installation description fields. You may program these fields with information specific to the device, such as date installed, the initials/name of the installer, the physical location of the device, etc. This configuration option will allow you to program the values of these fields.

2.5.7.6 NMEA 2000 PGN Enable/Disable Configuration

The WSO200 is capable of transmitting NMEA 2000® messages. You may individually enable or disable each of these messages. You may also change the rate of transmission of each of these messages if desired.

2.5.7.7 Restore Factory Defaults

Selecting this configuration option causes all stored parameters in the WSO200 to be reset to the values they contained when the unit was manufactured.

3 Operation

As shipped from the factory, the WSO200 automatically provides apparent wind direction, apparent wind speed, outside air temperature, relative humidity, and barometric pressure and requires no user configuration. However, some of the WSO200 parameters are user configurable as described below:

- **Installation Offset** – As shipped from the factory, the WSO200 will read 0° apparent wind direction when the wind blows into the sensor directly from the direction of the post nearest the black humidity sensor that protrudes from the bottom of the sensor. If the WSO200 is mounted with this post facing directly towards the bow of the boat, no adjustment is necessary; however, if the sensor is mounted in any other orientation, the installation offset can be used to compensate the apparent wind direction reading such that it will read 0° when the apparent wind is blowing directly into the bow of the vessel.
- **Wind Speed Damping Period** – As shipped from the factory, the WSO200 uses a damping period of 1.5 seconds to filter short-term variations in wind speed and direction and provide a more stable, usable output. This damping period can be changed by the user to increase or decrease the amount of filtering.
- **Periodic Rate of Transmission** – As shipped from the factory, the WSO200 transmits PGNs at a periodic rate. Alternatively, a PGN can be disabled by programming its periodic rate to zero.

Users with direct access to the NMEA 2000® interface may configure these parameters directly through the NMEA 2000® interface. Please refer to Appendix A for a description of the NMEA 2000® messages used to configure these parameters.

3.1 Ultrasonic Wind Speed Sensing

The wind speed measurement portion of the WSO200 consists of three sets of ultrasonic transducers spaced equally around a horizontally-aligned circle.

The wind speed is measured by measuring the time of flight of an ultrasonic sound pulse generated by one set of sensors and received by the other two sets of sensors. Each of the three sets of sensors takes a turn at being the transmitter, which the remaining two sensors receive the pulse. Wind blowing in the direction of flight of a pulse increases the speed of the pulse by the amount of the wind speed. Measuring the time of flight in both directions between a given pair of transducers allows the speed of sound to be cancelled out of the calculation, making the wind speed computation independent of air temperature and relative humidity.

The ultrasonic transducers are robust, yet sensitive instruments. The transducers themselves must be kept free of any coating, such as paint. The WSO200 unit itself, especially the area between the transducers, must be kept clean and free of debris for maximum wind speed and direction accuracy.

4 Maintenance

Regular maintenance is important to ensure continued proper operation of the Maretron WSO200. Perform the following tasks periodically:

- Clean the unit with a soft cloth. Do not use chemical cleaners as they may remove paint or markings or may corrode the WSO200 enclosure or seals. Do not use any cleaners containing acetone, as they will deteriorate the plastic enclosure. Any spider webs, etc. that accumulate inside the open portion of the WSO200 may be cleaned out with a water spray.
- Ensure that the unit is mounted securely and cannot be moved relative to the mounting surface. If the unit is loose, tighten the mounting screws.
- Check the security of the cable connected to the NMEA 2000® interface and tighten if necessary.

4.1 Replacing the Humidity Sensor

After extended service in an ocean environment, the humidity sensor may need to be replaced.

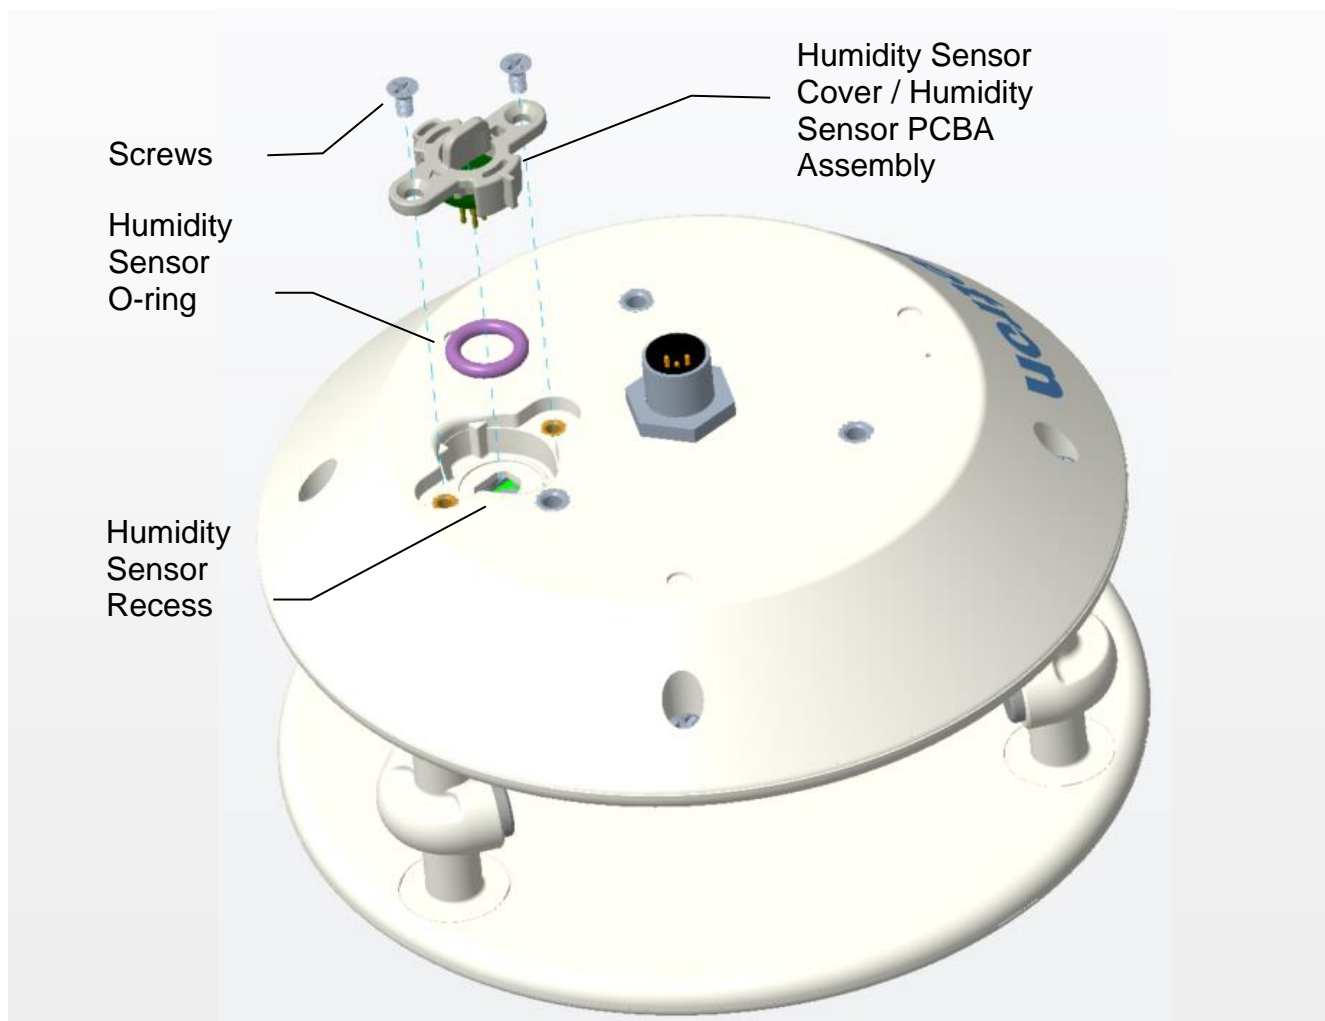


Figure 4 - Replacing the Humidity Sensor

Please follow these steps to replace the humidity sensor:

1. Remove the two screws holding the existing humidity sensor in place.
2. Remove the existing humidity sensor by grasping the tab on the humidity sensor holder and pulling straight up.
3. Remove the humidity sensor O-ring.
4. Snap the new humidity sensor PCBA into the humidity sensor holder. Please note that the PCBA and the humidity sensor holder are keyed, so that there is only one way to snap them together.
5. Place the new humidity sensor O-ring into the humidity sensor recess on the bottom of the WSO200, centering it on the raised rib.
6. Plug the assembled humidity sensor cover and humidity sensor PCBA into the humidity sensor recess on the bottom of the WSO200 until it is completely seated. Please ensure that the pins on the humidity sensor PCBA plug into the connector inside the WSO200. Also, please note that the humidity sensor cover is keyed so that there is only one way to plug it in.
7. Place the two screws into the screw holes in the humidity sensor and tighten until snug.

5 Troubleshooting

If you notice unexpected operation of the Maretron WSO200, follow the troubleshooting procedures in this section to remedy simple problems.

Symptom	Troubleshooting Procedure
No data output	Check the connections to the NMEA 2000® connector and tighten if necessary Ensure that power is supplied to the connected NMEA 2000® cable
Incorrect wind direction or speed	Ensure that the flow of wind into the WSO200 is not blocked by surrounding structures. Ensure that the flow of wind through the WSO200 is unimpeded and that the unit is free of debris.
Incorrect humidity reading	Check that a humidity offset value has not been configured Replace the humidity sensor

If these steps do not solve your problem, please contact Maretron Technical Support (refer to Section 7 for contact information).

Warning: There are no user-serviceable components inside the Maretron WSO200. Opening the WSO200 will expose the sensitive electronic components to adverse environmental conditions that may render the unit inoperative. Please do not open the WSO200, as this will automatically void the warranty. If service is required, please return the unit to an authorized Maretron service location.

6 Technical Specifications

Specifications

Parameter	Value	Comment
Wind Speed Range	0.5 to 99 knots (1 to 185 kph)	
Wind Speed Resolution	0.1 knot (0.19 kph)	
Wind Speed Accuracy	± 10% or 1 knot (1.9 kph)	Tilt 0° (operates to 30° tilt)
Wind Direction Accuracy	± 5°	Tilt 0° (operates to 30° tilt)
Temperature Range	-25° to 55° C	
Temperature Resolution	0.18°F (0.1°C)	
Temperature Accuracy	±1.8°F (1° C)	
Relative Humidity Range	0-99% RH	
Relative Humidity Resolution	1% RH	
Relative Humidity Accuracy	± 4% RH	
Barometric Pressure Range	26 to 32" Hg (880 to 1080 mb)	
Barometric Pressure Resolution	0.03" Hg (1 mb)	
Barometric Pressure Accuracy	±0.09" Hg (±3 mb)	

Certifications

Parameter	Comment
NMEA 2000	Certified
Maritime Navigation and Radiocommunication Equipment & Systems	IEC 61162-3
Maritime Navigation and Radiocommunication Equipment & Systems	IEC 60945
FCC and CE Mark	Electromagnetic Compatibility

NMEA 2000® Parameter Group Numbers (PGNs) - See Appendix A for Details

Description	PGN #	PGN Name	Default Rate
Periodic Data PGNs	130306	Wind Data	10 Times/Second
	130310	Environmental Parameters	2 Times/Second
	130311	Environmental Parameters	2 Times/Second
	130312	Temperature	2 Times/Second
	130313	Humidity	2 Times/Second
	130314	Actual Pressure	2 Times/Second
Response to Requested PGNs	126464	PGN List (Transmit and Receive)	N/A
	126996	Product Information	N/A
	126998	Configuration Information	N/A
Protocol PGNs	059392	ISO Acknowledge	N/A
	059904	ISO Request	N/A
	060416	ISO Transport Protocol, Connection Management	N/A
	060160	ISO Transport Protocol, Data Transfer	N/A
	060928	ISO Address Claim	N/A
	065240	ISO Address Command	N/A
	126208	NMEA Complex Request/Command/Ack.	N/A
Maretron Proprietary PGNs	126720	Configuration	N/A

WSO200 User's Manual

Electrical

Parameter	Value	Comment
Operating Voltage	9 to 32 Volts	DC Voltage
Power Consumption	<50mA	Average Current Drain
Load Equivalence Number (LEN)	1	NMEA 2000® Spec. (1LEN = 50 mA)
Reverse Battery Protection	Yes	Indefinitely
Load Dump Protection	Yes	Energy Rated per SAE J1113

Mechanical

Parameter	Value	Comment
Size	5.91" Diameter x 4.85" Tall (150mm Dia. x 123.2mm Tall)	Including Mounting Bracket
Weight	10 oz. (283 g)	Including Mounting Bracket
Mounting	Pole	Fits 1"-14 TPI Standard Marine Mount

Environmental

Parameter	Value
IEC 60945 Classification	Exposed
Degree of Protection	IP67
Operating Temperature	-25°C to 55°C
Storage Temperature	-40°C to 70°C
Relative Humidity	93%RH @40° per IEC60945-8.2
Vibration	2-13.2Hz @ ±1mm, 13.2-100Hz @ 7m/s ² per IEC 60945-8.7
Rain and Spray	12.5mm Nozzle @ 100liters/min from 3m for 30min per IEC 60945-8.8
Solar Radiation	Ultraviolet B, A, Visible, and Infrared per IEC 60945-8.10
Corrosion (Salt Mist)	4 times 7days @ 40°C, 95%RH after 2 hour Salt Spray Per IEC 60945-8.12
Electromagnetic Emission	Conducted and Radiated Emission per IEC 60945-9
Electromagnetic Immunity	Conducted, Radiated, Supply, and ESD per IEC 60945-10
Safety Precautions	Dangerous Voltage, Electromagnetic Radio Frequency per IEC 60945-12

7 Technical Support

If you require technical support for Maretron products, you can reach us in one of the following ways:

Telephone: +1-602-861-1707
Toll-Free: +1-866-550-9100
Fax: +1-602-861-1777
E-mail: ct_marinesupport@littelfuse.com
World Wide Web: <http://www.maretron.com>
Mail: Maretron, a Littelfuse Brand
Attn: Technical Support
120 Intracoastal Pointe Dr.
Jupiter, FL 33477

8 Maretron (2 Year) Limited Warranty

Carling Technologies warrants the Maretron® WSO200 to be free from defects in materials and workmanship for **two (2) years** from the date of original purchase. If within the applicable period any such products shall be proved to Carling's satisfaction to fail to meet the above limited warranty, such products shall be repaired or replaced at Carling's option. Purchaser's exclusive remedy and Carling's sole obligation hereunder, provided product is returned pursuant to the return requirements below, shall be limited to the repair or replacement, at Carling's option, of any product not meeting the above limited warranty and which is returned to Carling; or if Carling is unable to deliver a replacement that is free from defects in materials or workmanship, Purchaser's payment for such product will be refunded. Carling assumes no liability whatsoever for expenses of removing any defective product or part or for installing the repaired product or part or a replacement therefore or for any loss or damage to equipment in connection with which Maretron® products or parts shall be used. With respect to products not manufactured by Carling, Carling's warranty obligation shall in all respects conform to and be limited to the warranty actually extended to Carling by its supplier. The foregoing warranties shall not apply with respect to products subjected to negligence, misuse, misapplication, accident, damages by circumstances beyond Carling's control, to improper installation, operation, maintenance, or storage, or to other than normal use or service.

THE FOREGOING WARRANTIES ARE EXPRESSLY IN LIEU OF AND EXCLUDES ALL OTHER EXPRESS OR IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE.

Statements made by any person, including representatives of Carling, which are inconsistent or in conflict with the terms of this Limited Warranty, shall not be binding upon Carling unless reduced to writing and approved by an officer of Carling.

IN NO CASE WILL CARLING, OR ANY OF ITS PARENT, SUBSIDIARY, OR AFFILIATED COMPANIES BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, DAMAGES FOR LOSS OF USE, LOSS OF ANTICIPATED PROFITS OR SAVINGS, OR ANY OTHER LOSS INCURRED BECAUSE OF INTERRUPTION OF SERVICE. IN NO EVENT SHALL CARLING'S AGGREGATE LIABILITY EXCEED THE PURCHASE PRICE OF THE PRODUCT(S) INVOLVED. CARLING SHALL NOT BE SUBJECT TO ANY OTHER OBLIGATIONS OR LIABILITIES, WHETHER ARISING OUT OF BREACH OF CONTRACT OR WARRANTY, TORT (INCLUDING NEGLIGENCE), OR OTHER THEORIES OF LAW WITH RESPECT TO PRODUCTS SOLD OR SERVICES RENDERED BY CARLING, OR ANY UNDERTAKINGS, ACTS OR OMISSIONS RELATING THERETO.

Carling does not warrant that the functions contained in any software programs or products will meet purchaser's requirements or that the operation of the software programs or products will be uninterrupted or error free. Purchaser assumes responsibility for the selection of the software programs or products to achieve the intended results, and for the installation, use, and results obtained from said programs or products. No specifications, samples, descriptions, or illustrations provided by Carling to Purchaser, whether directly, in trade literature, brochures or other documentation shall be construed as warranties of any kind, and any failure to conform with such specifications, samples, descriptions, or illustrations shall not constitute any breach of Carling's limited warranty.

Warranty Return Procedure:

To apply for warranty claims, contact Carling or a Maretron dealer to describe the problem and determine the appropriate course of action. If a return is necessary, place the product in its original packaging together with proof of purchase and send to an Authorized Maretron Service Location. You are responsible for all shipping and insurance charges. Carling will return the replaced or repaired product with all shipping and handling prepaid except for requests requiring expedited shipping (i.e. overnight shipments). Failure to follow this warranty return procedure could result in the product's warranty becoming null and void.

Carling reserves the right to modify or replace, at its sole discretion, without prior notification, the warranty listed above. To obtain a copy of the then current warranty policy, please go to the following web page:
<http://www.maretron.com/company/warranty.php>

This Page Intentionally Left Blank

Appendix A – NMEA 2000® Interfacing

WSO200 NMEA 2000® Periodic Data Transmitted PGNs

PGN 130306 – Wind Data

The WSO200 uses this PGN to provide a regular transmission of apparent wind speed and direction data. The factory default for periodic transmission rate is ten times per second. The transmission of this PGN can be disabled (see PGN 126208 – NMEA Request Group Function – Transmission Periodic Rate).

- Field 1: SID – The sequence identifier field is used to tie related PGNs together. For example, the WSO200 will transmit identical SIDs for 130306 (Wind Data) and 130311 (Environmental Parameters) to indicate that the readings are linked together (i.e., the data from each PGN was taken at the same time although they are reported at slightly different times).
- 2: Wind Speed – This field is used to indicate the wind speed in units of 10mm/second.
 - 3: Wind Direction – This field is used to indicate the wind direction in units of 0.0001 radians/second.
 - 4: Wind Reference – This field is set to a value of 0x02 to indicate that the wind reading is an apparent wind speed and direction.
 - 5: Reserved (21 bits) – This field is reserved by NMEA; therefore, this field always contains a value of 0x1FFFFFF (the WSO200 sets all reserved bits to a logic 1)

PGN 130311 – Environmental Parameters

The WSO200 uses this PGN to provide a regular transmission of outside temperature, relative humidity, and atmospheric pressure. The factory default for periodic transmission rate is twice per second. The transmission of this PGN can be disabled (see PGN 126208 – NMEA Request Group Function – Transmission Periodic Rate).

- Field 1: SID – The sequence identifier field is used to tie related PGNs together. For example, the WSO200 will transmit identical SIDs for 130306 (Wind Data) and 130311 (Environmental Parameters) to indicate that the readings are linked together (i.e., the data from each PGN was taken at the same time although they are reported at slightly different times).
- 2: Temperature Instance – The WSO200 sets this field to a value of 0x01 to indicate that the temperature reading is a reading of outside temperature.
 - 3: Humidity Instance – The WSO200 sets this field to a value of 0x01 to indicate that the relative humidity reading is a reading of outside humidity.
 - 4: Temperature – This field is used to indicate the outside air temperature in units of 0.01°K.
 - 5: Humidity – This field is used to indicate the relative humidity in units of 0.004%.
 - 6: Atmospheric Pressure – This field is used to indicate the barometric pressure in units of 100 Pa.

PGN 130312 – Temperature

The WSO200 uses this PGN to provide a regular transmission of outside temperature. The factory default for periodic transmission rate is disabled. The transmission of this PGN can be enabled (see PGN 126208 – NMEA Request Group Function – Transmission Periodic Rate).

- Field 1: SID – The sequence identifier field is used to tie related PGNs together. For example, the WSO200 will transmit identical SIDs for 130306 (Wind Data) and 130311 (Environmental Parameters) to indicate that the readings are linked together (i.e., the data from each PGN was taken at the same time although they are reported at slightly different times).
- 2: Temperature Instance – This field is used to distinguish the temperature reading from this device from those of other devices. The value of this field is user-programmable.
- 3: Temperature Source – The WSO200 sets this field to a value of 0x01 to indicate that the temperature reading is a reading of outside temperature.
- 4: Actual Temperature – This field is used to indicate the outside air temperature in units of 0.01°K.
- 5: Set Temperature – This field is not used by the WSO200 and is set to a value of “Data Not Available”.
- 6: Reserved

PGN 130313 – Humidity

The WSO200 uses this PGN to provide a regular transmission of outside humidity. The factory default for periodic transmission rate is disabled. The transmission of this PGN can be enabled (see PGN 126208 – NMEA Request Group Function – Transmission Periodic Rate).

- Field 1: SID – The sequence identifier field is used to tie related PGNs together. For example, the WSO200 will transmit identical SIDs for 130306 (Wind Data) and 130311 (Environmental Parameters) to indicate that the readings are linked together (i.e., the data from each PGN was taken at the same time although they are reported at slightly different times).
- 2: Humidity Instance – This field is used to distinguish the humidity reading from this device from those of other devices. The value of this field is user-programmable.
- 3: Humidity Source – The WSO200 sets this field to a value of 0x01 to indicate that the temperature reading is a reading of outside humidity.
- 4: Actual Humidity – This field is used to indicate the outside humidity in units of 0.004%.
- 5: Set Humidity – This field is not used by the WSO200 and is set to a value of “Data Not Available”.
- 6: Reserved

PGN 130313 – Actual Pressure

The WSO200 uses this PGN to provide a regular transmission of atmospheric pressure. The factory default for periodic transmission rate is disabled. The transmission of this PGN can be enabled (see PGN 126208 – NMEA Request Group Function – Transmission Periodic Rate).

- Field 1: SID – The sequence identifier field is used to tie related PGNs together. For example, the WSO200 will transmit identical SIDs for 130306 (Wind Data) and 130311 (Environmental Parameters) to indicate that the readings are linked together (i.e., the data from each PGN was taken at the same time although they are reported at slightly different times).
- 2: Pressure Instance – This field is used to distinguish the pressure reading from this device from those of other devices. The value of this field is user-programmable.
- 3: Pressure Source – The WSO200 sets this field to a value of 0x00 to indicate that the temperature reading is a reading of atmospheric pressure.

- 4: Pressure— This field is used to indicate the atmospheric pressure in units of 0.1Pa.
- 5: Set Humidity – This field is not used by the WSO200 and is set to a value of “Data Not Available”.
- 6: Reserved