N2KView Configuration Offline - Alerts & Cameras

For users setting up or reviewing N2KView configurations while off the vessel, they will identify that some viewing content may not be available to access such as Alerts and Cameras.

In order to acquire access to such features, we will take advantage of the Demo Mode feature.

When initializing N2KView, select **Enter Demo Mode**.

Disclaimer
Maretron
Vessel Monitoring & Control
N2KView® - Vessel Monitoring and Control System
Software Version - 6.0.13.20200106
WARNING: By pressing "Accept", you acknowledge that while Maretron products are designed to be accurate and reliable, they should be used only as aids to navigation and vessel monitoring and control and not as a replacement for traditional aids and techniques.
Label (Display Name): Ron's Desk
Exit
Enter Demo Mode
Accept

You will be able to identify if you are in Demo Mode with the Demo stamp located in the upper left-hand corner as well as actively displaying values within the gauge components.

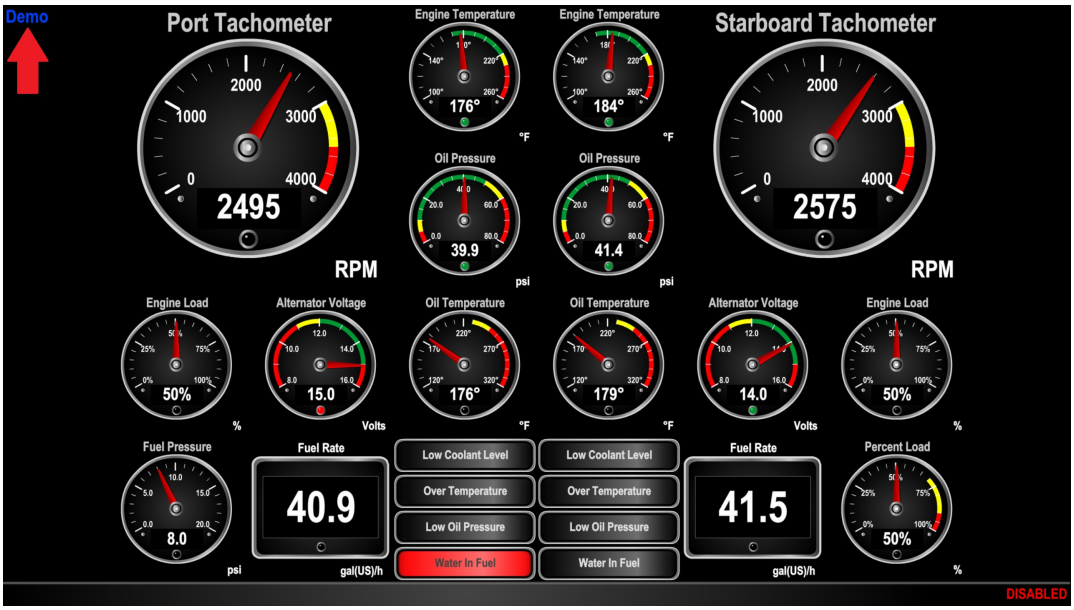

While in Demo mode, load your custom configuration that you wish to view.

Please refer to the following article for loading an N2KView Configuration file.
- https://www.maretron.com/wp-content/phpkbv95/article.php?id=697

Alerts Management

With your custom configuration loaded

- Tap on the display to reveal the tabs and select **Commands & Settings**

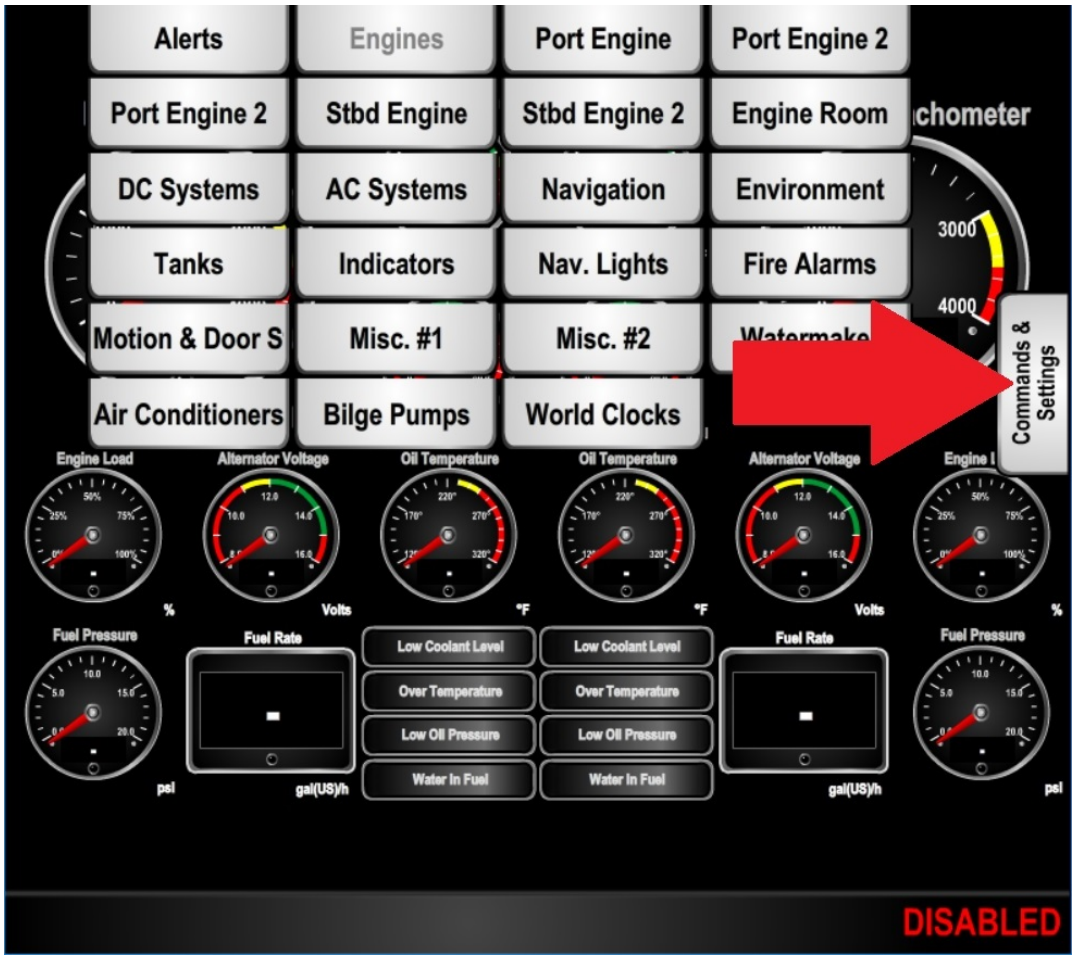
Alerts
Engines
Port Engine
Port Engine 2
Port Engine 2
Stbd Engine
Stbd Engine 2
Engine Room
DC Systems
AC Systems
Navigation
Environment
Tanks
Indicators
Nav. Lights
Fire Alarms
Motion & Door S
Misc. #1
Misc. #2
Air Conditioners
Bilge Pumps
World Clocks
Commands & Settings
Engine Load
Alternator Voltage
Oil Temperature
Oil Temperature
Alternator Voltage
%
Volts
°F
°F
Volts
Fuel Pressure
Fuel Rate
Low Coolant Level
Over Temperature
Low Oil Pressure
Water In Fuel
Low Coolant Level
Over Temperature
Low Oil Pressure
Water In Fuel
Fuel Rate
Fuel Pressure
psi
gal(US)/h
gal(US)/h
psi
DISABLED

- Alerts Setup

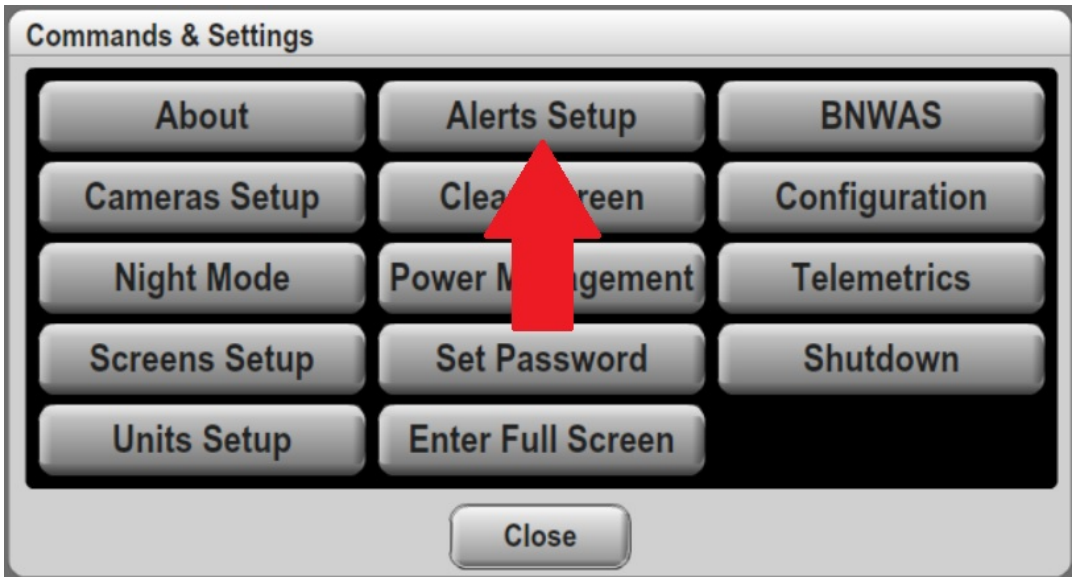

- Alert Table Editor

You now have full access to Create, Edit or Delete any alert parameters.

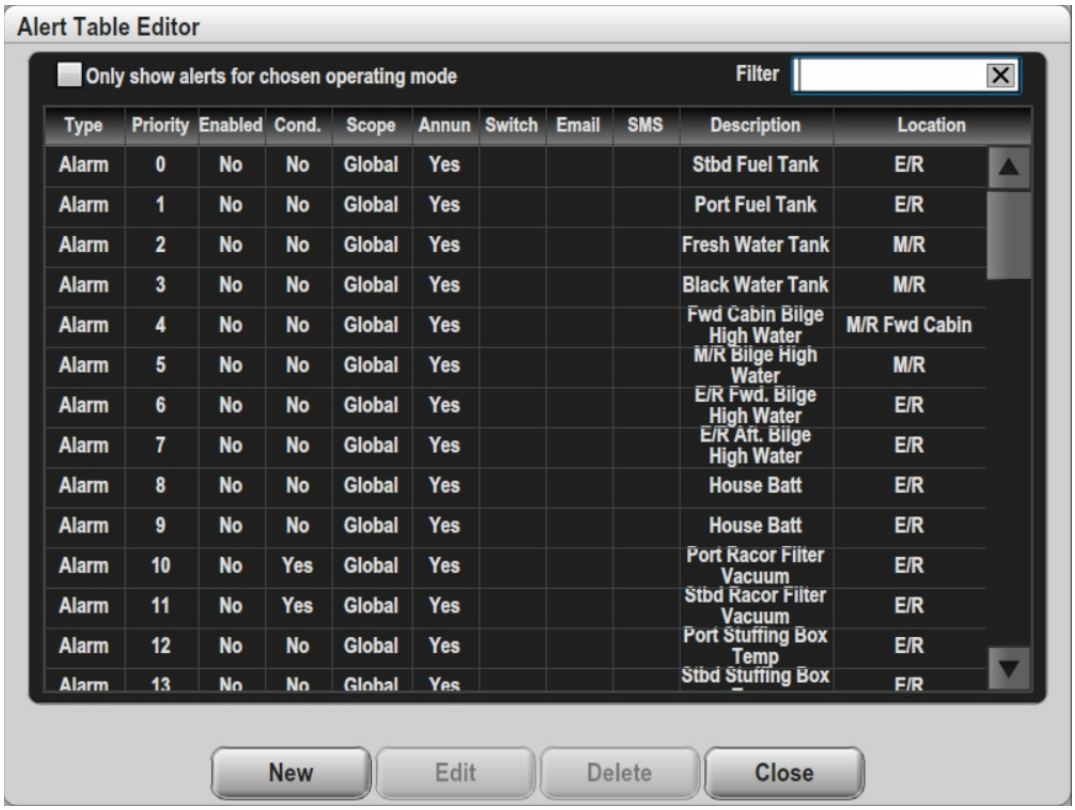
Alert Table Editor
Only show alerts for chosen operating mode
Filter
Type Priority Enabled Cond. Scope Annun Switch Email SMS Description Location
Alarm 0 No No Global Yes Stbd Fuel Tank E/R
Alarm 1 No No Global Yes Port Fuel Tank E/R
Alarm 2 No No Global Yes Fresh Water Tank M/R
Alarm 3 No No Global Yes Black Water Tank M/R
Alarm 4 No No Global Yes Fwd Cabin Bilge High Water M/R Fwd Cabin
Alarm 5 No No Global Yes M/R Bilge High Water M/R
Alarm 6 No No Global Yes E/R Fwd. Bilge High Water E/R
Alarm 7 No No Global Yes E/R Aft. Bilge High Water E/R
Alarm 8 No No Global Yes House Batt E/R
Alarm 9 No No Global Yes House Batt E/R
Alarm 10 No Yes Global Yes Port Racor Filter Vacuum E/R
Alarm 11 No Yes Global Yes Stbd Racor Filter Vacuum E/R
Alarm 12 No No Global Yes Port Stuffing Box Temp E/R
Alarm 13 No No Global Yes Stbd Stuffing Box E/R
New
Edit
Delete
Close

-

-

Camera Management

With your custom configuration loaded

- Tap on the display to reveal the tabs and select **Commands & Settings**

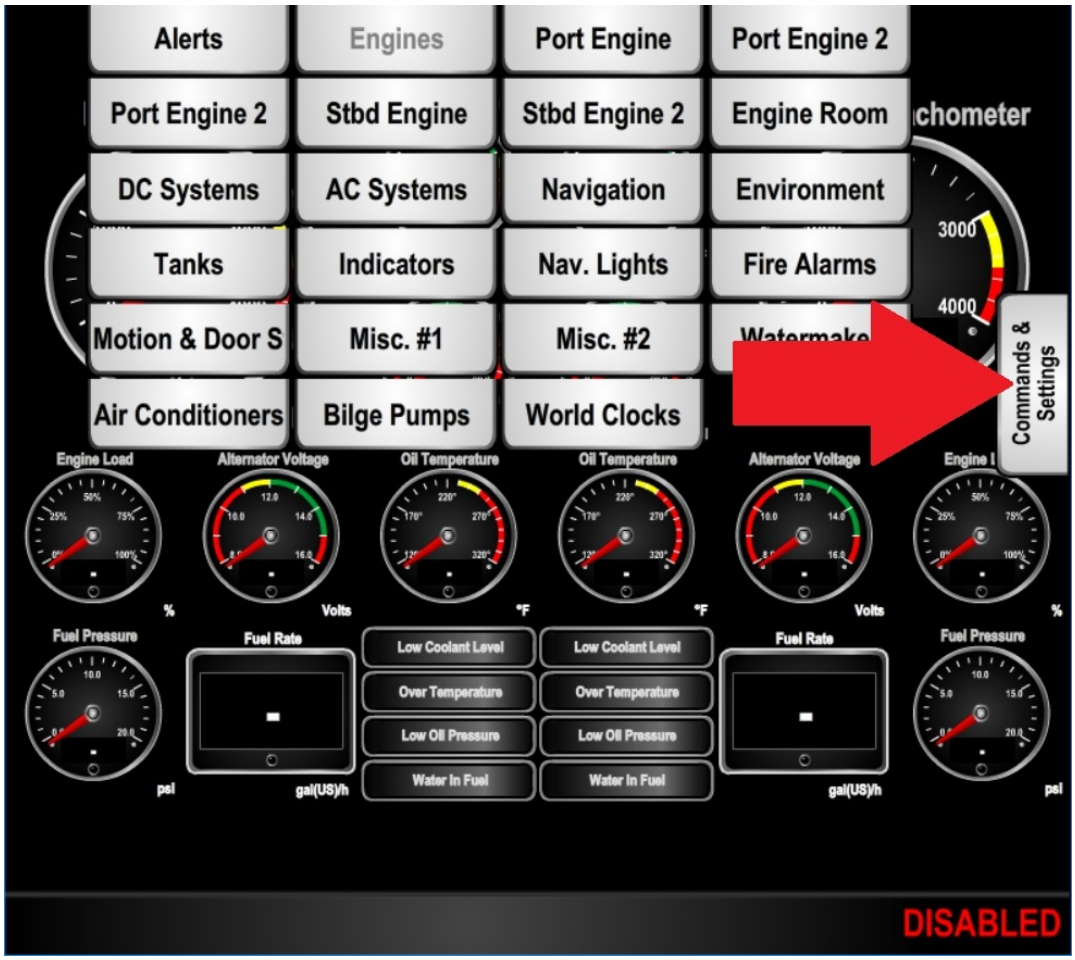

- Cameras Setup

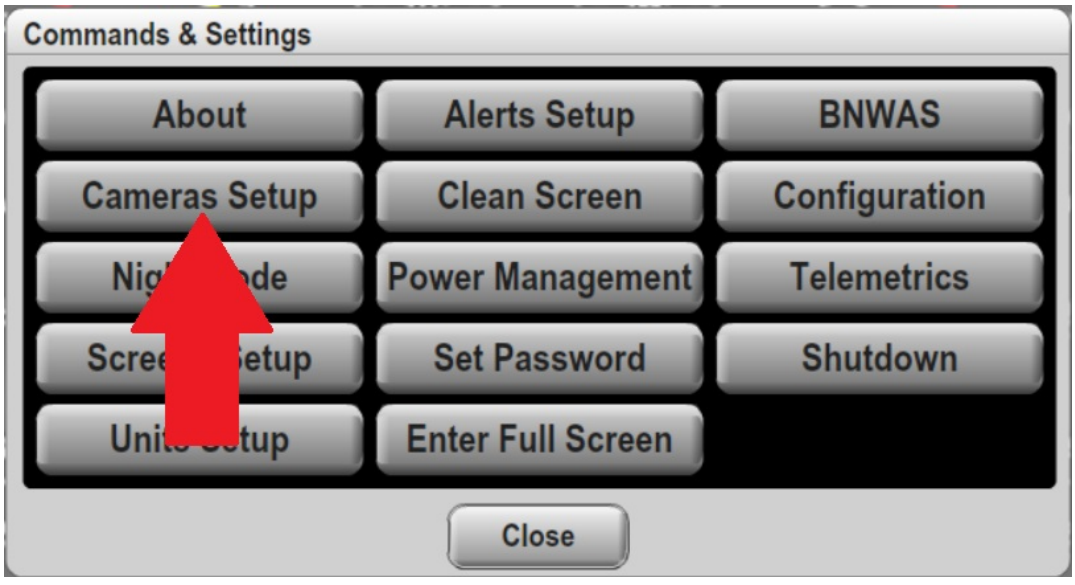

You now have full access to Create, Edit or Delete any Cameras that are available on your network.

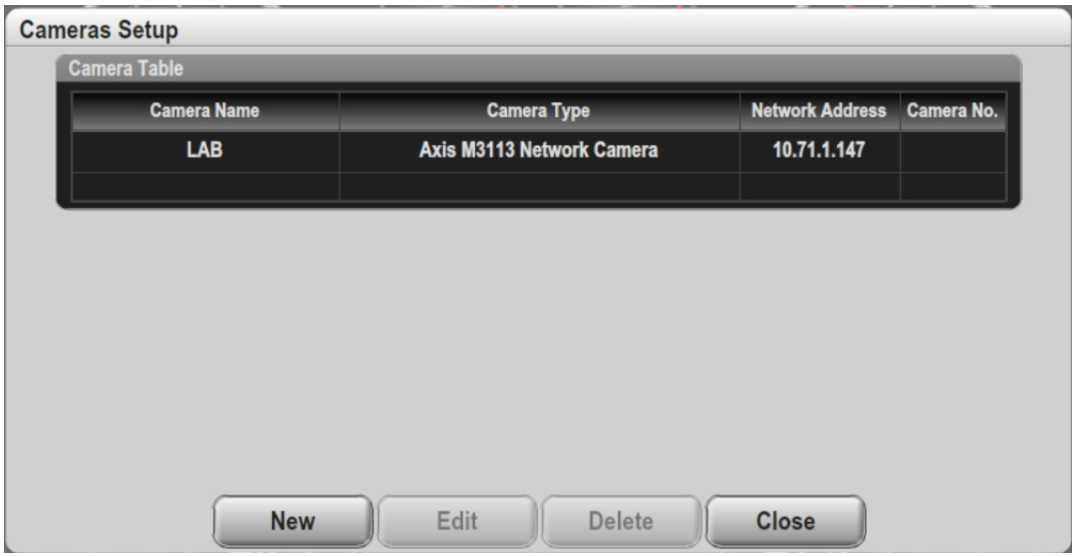

Example of live feed streaming while initializing a new camera setup.

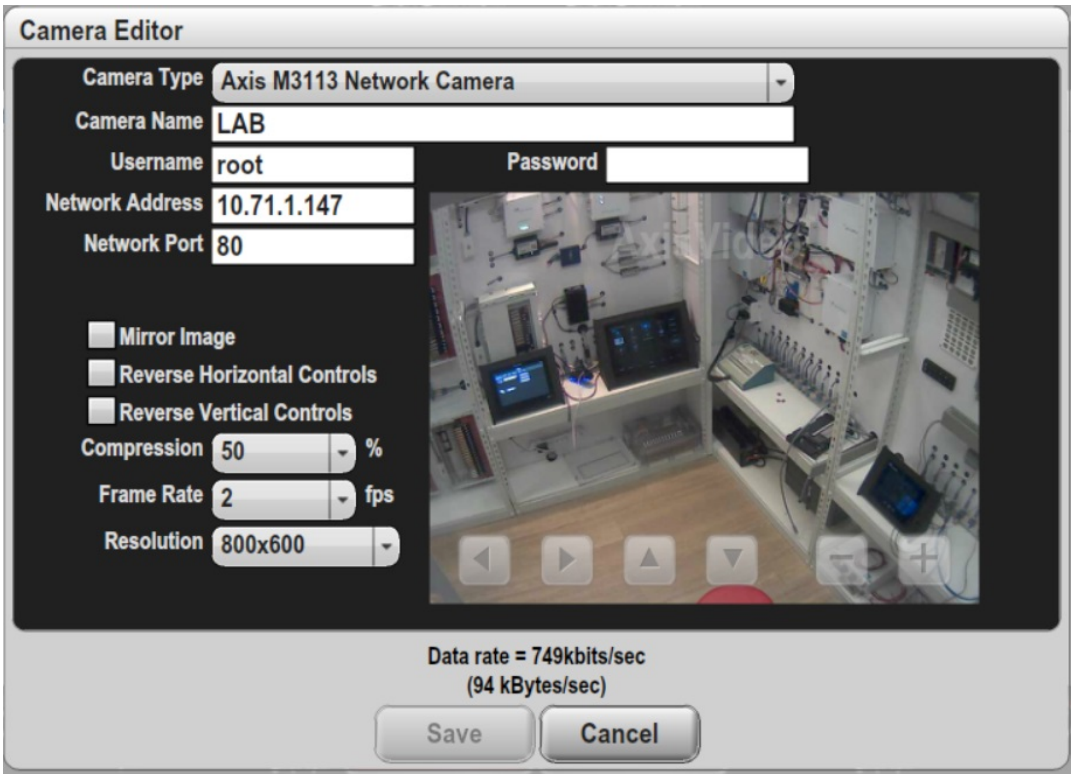

To review additional details of supported cameras within N2KView, please visit the following article.
- https://www.maretron.com/wp-content/phpkbv95/article.php?id=447

If you have any additional questions, please contact our support team at (866) 550-9100 or via email at Support@Maretron.com.

Online URL:
https://www.maretron.com/wp-content/phpkbv96/article.php?id=709