

Installation Instructions

Maretron TP-IP-1 - Immersion Temperature Probe for TMP100

Instructions

Please follow these instructions to connect the TP-IP-1 immersion temperature probe to the NMEA 2000® network via a Maretron TMP100 Temperature Module. The wiring diagram appears in Figure 1 below. The diagram shows a connection to channel #2, but connections to other channels are similar. Please note that the TP-IP-1 may be connected only to channels #2 - #5. It may not be connected to channels #0 and #1.

1. The TP-IP-1 is packaged with a compression fitting for mounting the temperature probe to a liquid vessel. Drill and tap a 1/4" NPT hole in the tank to be monitored where you want the probe to enter the tank. (Alternatively, you may purchase a metric compression fitting instead).
2. Thread the male end of the compression fitting into the hole and tighten securely.
3. Insert the immersion probe into the compression fitting and tighten the collar of the compression fitting to achieve a snug, leak-proof fit.
4. The TP-IP-1 cable contains one red and one black wire.
Connect the black wire to the appropriate Tx- terminal on the TMP100 as shown in Figure 1 below.
Connect the red wire to the appropriate Tx+ terminal on the TMP100 as shown in Figure 1 below.
5. Use a Maretron DSM Series display or a PC running N2KAnalyzer software paired with an appropriate NMEA 2000® gateway to properly configure the TMP100 and channel for use with the TP-IP-1 temperature probe to apply the following characteristics such as Label, Source Type, and Instance.
 - a. **Channel #x Label** is a text string that allows you to identify the particular temperature that is being measured by this probe. For example, if you have two tanks, you may wish to label one of them "Port Live Well" and the other "Starboard Live Well".
 - b. **Channel #x Source** applied the type of temperature you are measuring; many are pre-defined.
 - c. **Channel #x Instance** applies to a number that is unique across the network for the source you have selected. In other words, if you are measuring Live Well Temperature, there may be only one channel on the network that measures Live Well Temperature that has an instance number of 0. Number further Live Well Temperature channels as instance #1, #2, and so on.
6. Using a Maretron DSM Series display, N2KView, or an MConnect to show the temperature with the source and instance you have selected and verify that you see a valid temperature on the display.

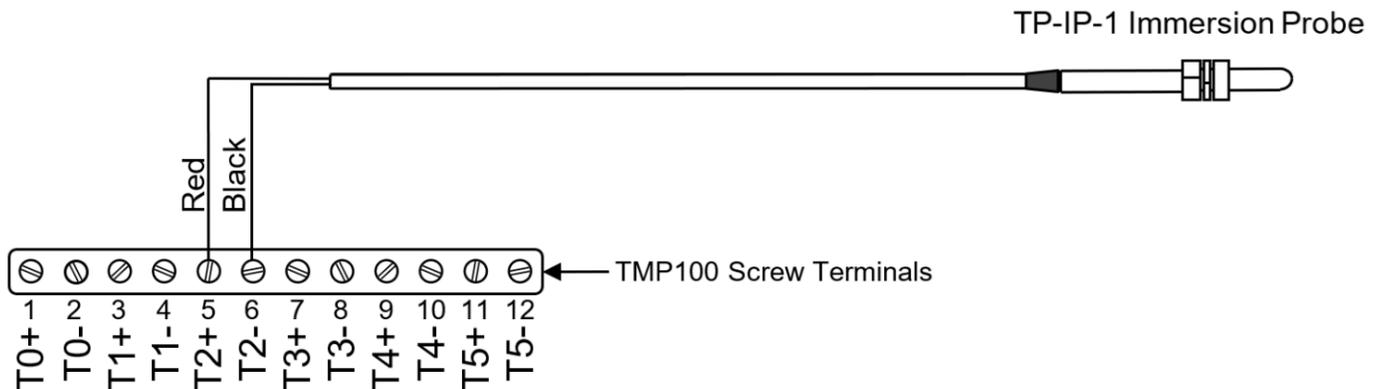


Figure 1 – Wiring Diagram

For installation support, please contact:



Toll Free: 1-866-550-9100
Phone: 1-603-324-7900
E-mail: support@maretron.com
Customer Portal: Customer.Raymarine.com
World Wide Web: <http://www.maretron.com>
Mail: Raymarine-Maretron FL Service Center
120 Intracoastal Pointe Drive
Jupiter, FL 33477 USA